







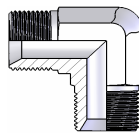

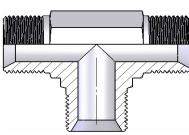
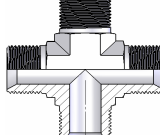








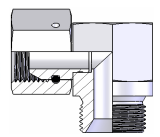
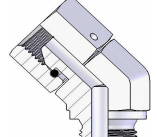
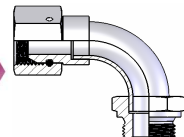
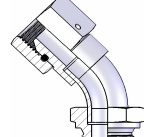






















Адаптеры BSP

Страница / Page		4	4	5	5	
BSP niples						
	1700	1800	R605	2000		
	Union	Reducing Connector	Male-Female Reducing M BSP x F BSP	Male-Female Union M BSP x F BSP		
Страница / Page		6	6	7	7	7
BSP niples						
	2010	2020	A106	A107	A108Z	
	Male-Female Connector M BSP x F BSP	Male/Male Extention	Bulkhead	Bulkhead locknut	Nipple for Bulkhead	
Страница / Page		8	8	9	9	
BSP male						
	4520	4530	4730	4900		
	90° Elbow Union	45° Elbow Union	Union Tee	Cross Union		
Страница / Page		10	10	11	11	12
BSP tee swivel						
	4700	4710	4800	4810	4720	
	Run Tee Connector BSP Swivel Female	Branch Tee Connector BSP Swivel Female	Run Tee Connector BSP Male	Branch Tee Connector BSP Male	Union Tee BSP Swivel Female	
Страница / Page		12	13	13		
BSP m/f swivel 1 piece						
	2350	4500	4510			
	Swivel Connector M BSP x F BSP	90° Swivel Elbow M BSP x F BSP	45° Swivel Elbow M BSP x F BSP			
Страница / Page		14	14	15	15	
BSP m/f swivel comp.			BSP m/f swivel welded			
	3200	3320		2550	2650	
	90° Comp. Swivel elbow M BSPxF BSP welded	45° Comp. Swivel elbow M BSPxF BSP Forged		90° Swivel Elbow M BSP x F BSP welded	45° Swivel Elbow M BSP x F BSP welded	

Dimensions and general characteristics may be changed at any time without prior notice.

Data contained herein are for information purpose only, and it does not enlarge, amend or imply any warranty other than provided by us with the product.
Any use of the product not in conformance with our instructions may be dangerous.






























Адаптеры BSP

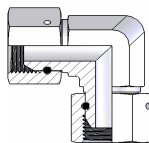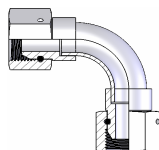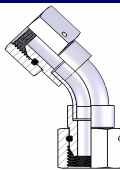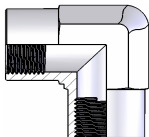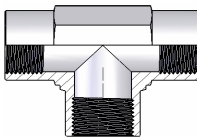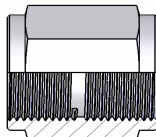Страница / Page		16		16		17		17	
BSPP f/f swivel 1 piece									
		2450 Swivel Connector F BSP x F BSP		4550 90° Swivel Elbow F BSP x F BSP		2750 90° Swivel Elbow F BSP x F BSP welded		2850 45° Swivel Elbow F BSP x F BSP welded	
Страница / Page		18		18		19			
BSPP f/f									
		4570 90° Elbow Union F BSP x F BSP		4820 Union Tee F BSP x F BSP x F BSP		A105 Union F BSP x F BSP			
Страница / Page		19		20		20			
BSPP plug swivel				BSPP plugs					
		A608 BSP Female Plug Swivel				A604 BSP Female Plug		A605 BSP Male Plug	
Страница / Page		21		21		22		22	
BSPP weldable									
		A051 BSP Female End Weldable - Swivel		1850 BSP Male End (hex) Weldable		220C BSP Male End (round) Weldable		2200 Threaded Sleeve Weldable	
Страница / Page		23		24		24		25	
BSPP BSPT									
		1865 Male Connector M BSP x M BSPT		2360 Swivel Connector M BSPT x F BSP		4860 Branch Tee Connector BSP - BSPT - BSP		4620 90° Elbow Connector M BSP x M BSPT	
Страница / Page		26		26					
BSPP BSPT									
		4600 90° Swivel Elbow F BSP x M BSPT		4610 45° Swivel Elbow F BSP x M BSPT					

Dimensions and general characteristics may be changed at any time without prior notice.

Data contained herein are for information purpose only, and it does not enlarge, amend or imply any warranty other than provided by us with the product.
Any use of the product not in conformance with our instructions may be dangerous.

Адаптеры BSP

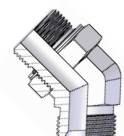
Страница / Page	27	28	28	29	29	30
BSP NPTF						
	1875 Male Connector M BSP x M NPTF	2365 Swivel Connector M NPTF x F BSP	4870 Branch Tee Connector BSP - NPTF - BSP	4670 90° Elbow Connector M BSP x M NPTF	4680 45° Elbow Connector M BSP x M NPTF	4650 90° Swivel Elbow F BSP x M NPTF
	Страница / Page	30	31	32	32	33
BSP NPTF		BSP BSP Adj.				
	4660 45° Swivel Elbow F BSP x M NPTF		3900 Adjustable Elbow M BSP x M BSP Adj.	3255 Adjustable Elbow F BSP x M BSP Adj.	3600 Adjustable Run Tee BSP - BSP - BSP Adj.	3605 Adjustable Branch Tee BSP - BSP Adj. - BSP
	Страница / Page		34	35	35	36
BSP metric						
	1805 Male Connector M BSP x M Metric 60°	2370 Swivel Nut female F Metric 60° x M BSP	3510 Male Connector M BSP x M Metric	3515 Long Male Connector M BSP x M Metric	3560 Swivel Nut female M Metric x F BSP	
	Страница / Page	37	37	38	38	39
BSP metric						
	3910 Adjustable Elbow M BSP x M Metric	3915 Long Adjustable Elbow M BSP x M Metric	3410 Adjustable 45° Elbow M BSP x M Metric	3610 Adjustable Run Tee BSP - BSP - Metric	3615 Adjustable Branch Tee BSP - Metric - BSP	
	Страница / Page	40	40	41	41	42
BSP UNF						
	3520 Male Connector M BSP x M UNF	3525 Long Male Connector M BSP x M UNF	3570 Swivel Nut female F BSP x M UNF	3920 Adjustable Elbow M BSP x M UNF	3925 Long Adjustable Elbow M BSP x M UNF	
	Страница / Page	42	43	43		
BSP UNF						
	3420 Adjustable 45° Elbow M BSP x M UNF	3620 Adjustable Run Tee BSP - BSP - UNF	3625 Adjustable Branch Tee BSP - UNF - BSP			

Dimensions and general characteristics may be changed at any time without prior notice.

Data contained herein are for information purpose only, and it does not enlarge, amend or imply any warranty other than provided by us with the product.
Any use of the product not in conformance with our instructions may be dangerous.

1700 Коннектор


Union

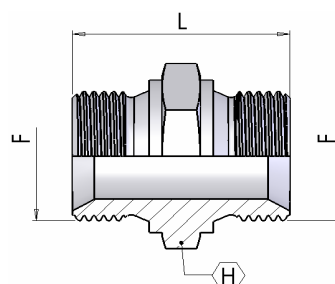

part number	Ø tube		Dimensions			
	mm	inch	F	L	H	
1700-02-02	6	1/4"	1/8-28	24	14	
1700-04-04	8	5/16"	1/4-19	32	19	
1700-06-06	10	3/8"	3/8-19	36	22	
1700-08-08	12	1/2"	1/2-14	42	27	
1700-10-10	16	5/8"	5/8-14	40	30	
1700-12-12	20	3/4"	3/4-14	42	32	
1700-16-16	25	1"	1-11	52	41	
1700-20-20	32	1.1/4"	1.1/4-11	57	50	
1700-24-24	38	1.1/2"	1.1/2-11	60	55	
1700-32-32	51	2"	2-11	71	70	

1800 Редукционный коннектор


Reducing Niple

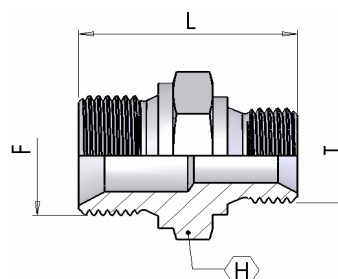

part number	Ø tube		Dimensions				
	mm	inch	F	T	L	H	
1800-04-02	6	1/4"	1/4-19	1/8-28	29	19	
1800-06-02	6	1/4"	3/8-19	1/8-28	30	22	
1800-06-04	8	5/16"	3/8-19	1/4-19	34	22	
1800-08-04	8	5/16"	1/2-14	1/4-19	35	27	
1800-08-06	10	3/8"	1/2-14	3/8-19	40	27	
1800-10-08	12	1/2"	5/8-14	1/2-14	44	30	
1800-12-04	8	5/16"	3/4-14	1/4-19	41	32	
1800-12-06	10	3/8"	3/4-14	3/8-19	42	32	
1800-12-08	12	1/2"	3/4-14	1/2-14	44	32	
1800-12-10	16	5/8"	3/4-14	5/8-14	46	32	
1800-16-06	10	3/8"	1-11	3/8-19	45	38	
1800-16-08	12	1/2"	1-11	1/2-14	47	41	
1800-16-12	20	3/4"	1-11	3/4-14	49	41	
1800-20-12	20	3/4"	1.1/4-11	3/4-14	52	50	
1800-20-16	25	1"	1.1/4-11	1-11	55	50	
1800-24-12	20	3/4"	1.1/2-11	3/4-14	54	55	
1800-24-16	25	1"	1.1/2-11	1-11	58	55	
1800-24-20	32	1.1/4"	1.1/2-11	1.1/4-11	58	55	
1800-32-16	25	1"	2-11	1-11	64	70	
1800-32-20	32	1.1/4"	2-11	1.1/4-11	66	70	
1800-32-24	38	1.1/2"	2-11	1.1/2-11	68	70	

R605 Редукционный коннектор


Short Male-Female reducing

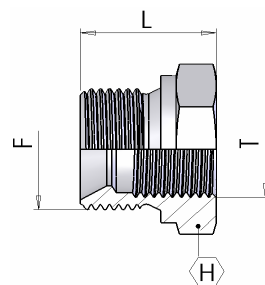

part number	Ø tube		Dimensions				
	mm	inch	F	T	L	H	
R605-04-02	6	1/4"	1/4"-19	1/8"-28	22	19	
R605-06-02	6	1/4"	3/8"-14	1/8"-28	22	22	
R605-06-04	8	5/16"	3/8"-19	1/4"-19	21	22	
R605-08-04	8	5/16"	1/2"-14	1/4"-19	24	27	
R605-08-06	10	3/8"	1/2"-14	3/8"-19	29	27	
R605-12-04	8	5/16"	3/4"-14	1/4"-19	27	32	
R605-12-06	10	3/8"	3/4"-14	3/8"-19	26	32	
R605-12-08	12	1/2"	3/4"-14	1/2"-14	27	32	
R605-16-06	10	3/8"	1-11	3/8"-19	31	41	
R605-16-08	12	1/2"	1-11	1/2"-14	30	41	
R605-16-12	20	3/4"	1-11	3/4"-14	31	41	
R605-20-12	20	3/4"	1.1/4-11	3/4"-14	34	50	
R605-20-16	25	1"	1.1/4-11	1-11	34	50	
R605-24-16	25	1"	1.1/2-11	1-11	35	55	
R605-24-20	32	1.1/4"	1.1/2-11	1.1/4-11	39	55	
R605-32-20	32	1.1/4"	2-11	1.1/4-11	43	70	
R605-32-24	38	1.1/2"	2-11	1.1/2-11	43	70	

2000 Адаптер соединительный


Male/female connector

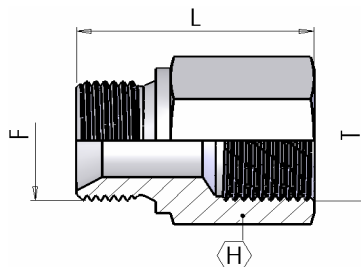

part number	Ø tube		Dimensions				
	mm	inch	F	T	L	H	
2000-04-33	8	5/16"	1/4-19	1/4-19	33	19	
2000-04-42	8	5/16"	1/4-19	1/4-19	42	19	
2000-04-55	8	5/16"	1/4-19	1/4-19	55	19	
2000-06-35	10	3/8"	3/8-19	3/8-19	35	22	
2000-06-54	10	3/8"	3/8-19	3/8-19	54	22	
2000-06-65	10	3/8"	3/8-19	3/8-19	65	22	
2000-08-45	12	1/2"	1/2-14	1/2-14	45	27	
2000-08-60	12	1/2"	1/2-14	1/2-14	60	27	
2000-08-80	12	1/2"	1/2-14	1/2-14	80	27	
2000-08-64	12	1/2"	1/2-14	1/2-14	64	27	
2000-12-48	20	3/4"	3/4-14	3/4-14	48	32	
2000-12-64	20	3/4"	3/4-14	3/4-14	64	32	
2000-12-75	20	3/4"	3/4-14	3/4-14	75	32	
2000-16-50	25	1"	1-11	1-11	50	41	
2000-16-90	25	1"	1-11	1-11	90	41	
2000-20-62	32	1.1/4"	1.1/4-11	1.1/4-11	62	50	

2010 Адаптер редукционный


Female-Male reducing

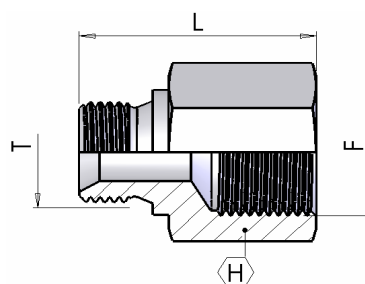

part number	Ø tube		Dimensions				
	mm	inch	F	T	L	H	
2010-02-04	8	5/16"	1/8-28	1/4-19	28	19	
2010-04-02	6	1/4"	1/4-19	1/8-28	29	19	
2010-04-06	10	3/8"	1/4-19	3/8-19	35	22	
2010-04-08	12	1/2"	1/4-19	1/2-14	36	27	
2010-06-04	8	5/16"	3/8-19	1/4-19	33	22	
2010-06-08	12	1/2"	3/8-19	1/2-14	37	27	
2010-08-04	8	5/16"	1/2-14	1/4-19	37	27	
2010-08-06	10	3/8"	1/2-14	3/8-19	39	27	
2010-08-12	20	3/4"	1/2-14	3/4-11	38	32	
2010-08-16	25	1"	1/2-14	1-11	42	41	
2010-12-04	8	5/16"	3/4-11	1/4-19	42	32	
2010-12-06	10	3/8"	3/4-11	3/8-19	43	32	
2010-12-08	12	1/2"	3/4-11	1/2-14	45	32	
2010-12-16	25	1"	3/4-11	1-11	49	41	
2010-16-08	12	1/2"	1-11	1/2-14	49	41	
2010-16-12	20	3/4"	1-11	3/4-14	50	41	
2010-16-20	20	3/4"	1-11	1.1/4-11	51	50	
2010-20-12	20	3/4"	1.1/4-11	3/4-11	51	50	
2010-20-16	25	1"	1.1/4-11	1-11	53	50	
2010-20-24	20	3/4"	1.1/4-11	1.1/2-11	57	55	
2010-24-16	25	1"	1.1/2-11	1-11	50	55	
2010-24-20	20	3/4"	1.1/2-11	1.1/4-11	52	55	
2010-32-20	20	3/4"	2-11	1.1/4-11	68	70	
2010-32-24	38	1.1/2"	2-11	1.1/2-11	68	70	

2020 Коннектор удлиненный


Male/Male Extention

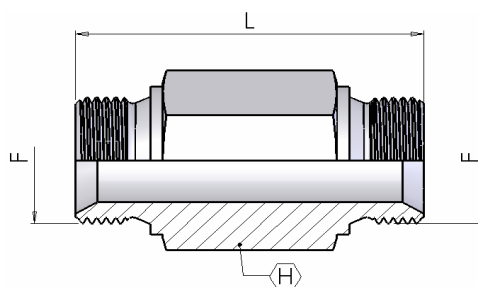

part number	Ø tube		Dimensions			
	mm	inch	F	L	H	
2020-04-04	8	5/16"	1/4-19	45	19	
2020-06-06	10	3/8"	3/8-19	47	22	
2020-08-08	12	1/2"	1/2-14	61	27	
2020-12-12	20	3/4"	3/4-14	73	32	
2020-16-16	25	1"	1-11	84	41	

A106 Контргайка


Bulkhead

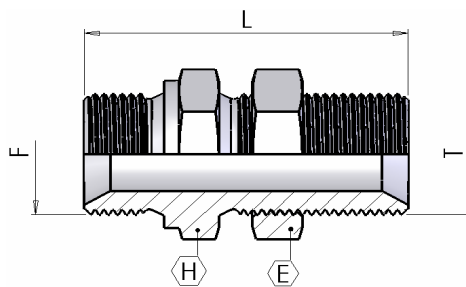

part number	Ø tube		Dimensions					
	mm	inch	F	T	L	H	E	
A106-02	6	1/4"	1/8-28	1/8-28	35	14	14	
A106-04	8	5/16"	1/4-19	1/4-19	46	19	19	
A106-06	10	3/8"	3/8-19	3/8-19	54	22	22	
A106-08	12	1/2"	1/2-14	1/2-14	57	27	27	
A106-10	16	5/8"	5/8-14	5/8-14	65	30	30	
A106-12	20	3/4"	3/4-14	3/4-14	65	32	32	
A106-16	25	1"	1-11	1-11	73	41	41	
A106-20	32	1.1/4"	2-11	2-11	79	50	50	

A107 Контргайка


Bulkhead locknut

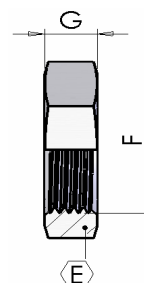

part number	Ø tube		Dimensions				
	mm	inch	F		G	E	
A107-02	6	1/4"	1/8-28		5	14	
A107-04	8	5/16"	1/4-19		7	19	
A107-06	10	3/8"	3/8-19		8	22	
A107-08	12	1/2"	1/2-14		9	27	
A107-10	16	5/8"	5/8-14		9	30	
A107-12	20	3/4"	3/4-14		10	32	
A107-16	25	1"	1-11		11	41	
A107-20	32	1.1/4"	2-11		13	50	

A108 Ниппель для контргайки


Nipple for Bulkhead

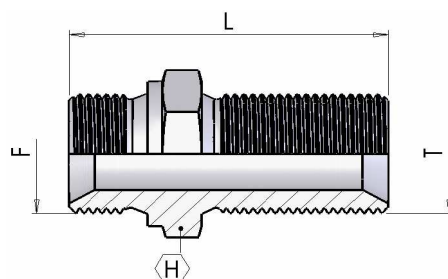

part number	Ø tube		Dimensions				
	mm	inch	F	T	L	H	
A108-02Z	6	1/4"	1/8-28	1/8-28	35	14	
A108-04Z	8	5/16"	1/4-19	1/4-19	46	19	
A108-06Z	10	3/8"	3/8-19	3/8-19	54	22	
A108-08Z	12	1/2"	1/2-14	1/2-14	57	27	
A108-10Z	16	5/8"	5/8-14	5/8-14	65	30	
A108-12Z	20	3/4"	3/4-14	3/4-14	65	32	
A108-16Z	25	1"	1-11	1-11	73	41	
A108-20Z	32	1.1/4"	2-11	2-11	79	50	

4520 Коннектор 90°


90° Union Elbow

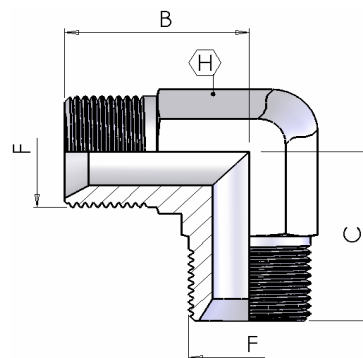

part number	Ø tube		Dimensions				
	mm	inch	F	B	C	H	
4520-04	8	5/16"	1/4-19	26	26	14	
4520-06	10	3/8"	3/8-19	32	32	19	
4520-08	12	1/2"	1/2-14	36	36	22	
4520-12	20	3/4"	3/4-14	40	40	27	
4520-16	25	1"	1-11	42	42	33	
4520-20	32	1.1/4"	1.1/4-11	52	52	41	
4520-24	38	1.1/2"	1.1/2-11	59	59	50	

4530 Коннектор 45°


45° Union Elbow

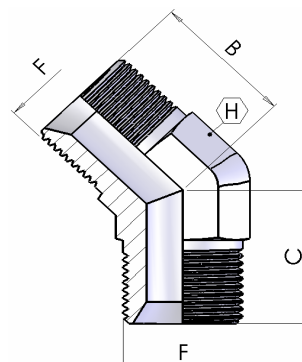

part number	Ø tube		Dimensions				
	mm	inch	F	B	C	H	
4530-04	8	5/16"	1/4-19	21	21	14	
4530-06	10	3/8"	3/8-19	25	25	19	
4530-08	12	1/2"	1/2-14	28	28	22	
4530-12	20	3/4"	3/4-14	33	33	27	
4530-16	25	1"	1-11	37	37	33	
4530-20	32	1.1/4"	1.1/4-11			41	
4530-24	38	1.1/2"	1.1/2-11			50	

4730 Тройник


Union Tee

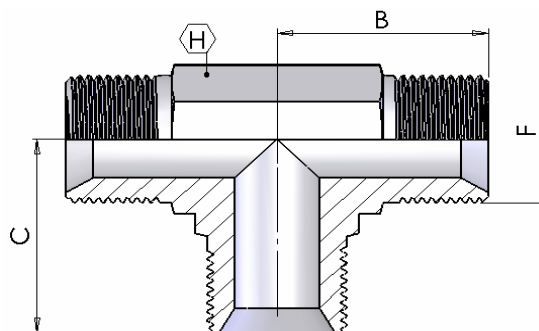

part number	Ø tube		Dimensions				
	mm	inch	F	B	C	H	
4730-04	8	5/16"	1/4-19	27	27	14	
4730-06	10	3/8"	3/8-19	28	28	19	
4730-08	12	1/2"	1/2-14	34	34	22	
4730-12	20	3/4"	3/4-14	40	40	27	
4730-16	25	1"	1-11	42	42	33	
4730-20	32	1.1/4"	1.1/4-11	52	52	41	
4730-24	38	1.1/2"	1.1/2-11	59	59	50	

4900 X-образный коннектор


Cross Union

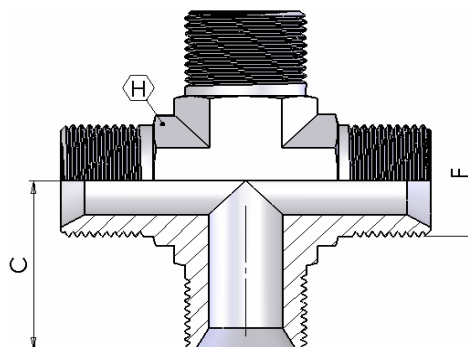

part number	Ø tube		Dimensions			
	mm	inch	F	C	H	
4900-04	8	5/16"	1/4-19	27	14	
4900-06	10	3/8"	3/8-19	32	19	
4900-08	12	1/2"	1/2-14	36	22	
4900-12	20	3/4"	3/4-14	40	27	
4900-16	25	1"	1-11	50	33	

4700 Тройник боковая гайка


Female run tee

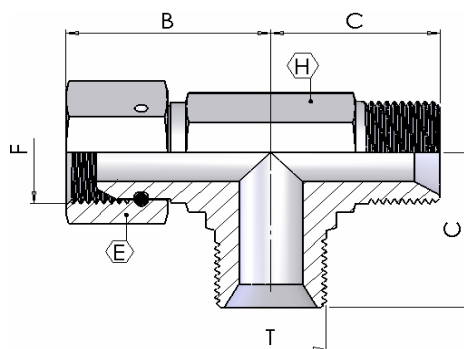

part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
4700-04	8	5/16"	1/4-19	1/4-19	32	27	14	19	
4700-06	10	3/8"	3/8-19	3/8-19	33	28	19	22	
4700-08	12	1/2"	1/2-14	1/2-14	40	34	22	27	
4700-12	20	3/4"	3/4-14	3/4-14	48	40	27	32	
4700-16	25	1"	1-11	1-11	52	42	33	38	
4700-20	32	1.1/4"	1.1/4-11	1.1/4-11	61	52	41	50	
4700-24	38	1.1/2"	1.1/2-11	1.1/2-11	61	59	50	55	

4710 Тройник нижняя гайка


Female branch tee

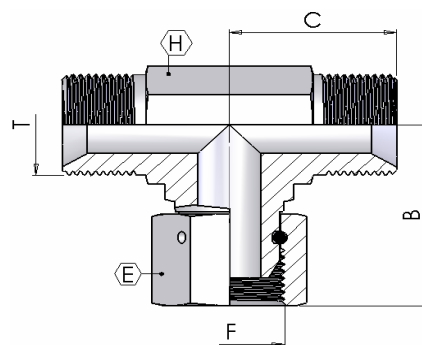

part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
4710-04	8	5/16"	1/4-19	1/4-19	32	27	14	19	
4710-06	10	3/8"	3/8-19	3/8-19	33	28	19	22	
4710-08	12	1/2"	1/2-14	1/2-14	40	34	22	27	
4710-12	20	3/4"	3/4-14	3/4-14	48	40	27	32	
4710-16	25	1"	1-11	1-11	52	42	33	38	
4710-20	32	1.1/4"	1.1/4-11	1.1/4-11	61	52	41	50	
4710-24	38	1.1/2"	1.1/2-11	1.1/2-11	61	59	50	55	

4800 **Адаптер Т-образный**


Male Run Tee

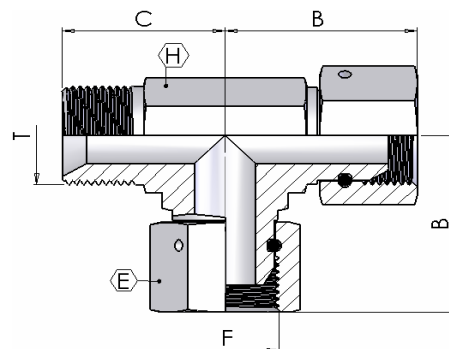

part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
4800-04	8	5/16"	1/4-19	1/4-19	32	27	14	19	
4800-06	10	3/8"	3/8-19	3/8-19	34	32	19	22	
4800-08	12	1/2"	1/2-14	1/2-14	40	34	22	27	
4800-12	20	3/4"	3/4-14	3/4-14	48	40	27	32	
4800-16	25	1"	1-11	1-11	52	42	33	38	

4810 **Адаптер Т-образный**


Male Branch Tee

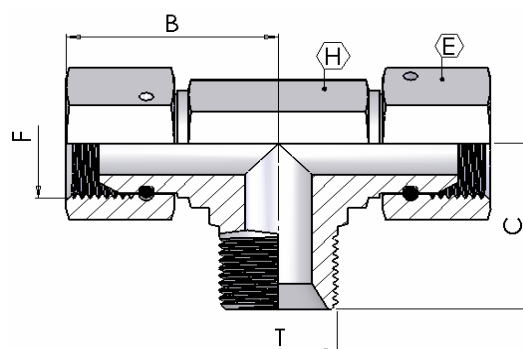

part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
4810-04	8	5/16"	1/4-19	1/4-19	32	27	14	19	
4810-06	10	3/8"	3/8-19	3/8-19	33	28	19	22	
4810-08	12	1/2"	1/2-14	1/2-14	40	34	22	27	
4810-12	20	3/4"	3/4-14	3/4-14	48	40	27	32	
4810-16	25	1"	1-11	1-11	52	42	33	38	

4720 Адаптер Т-образный


Swivel Female Union Tee

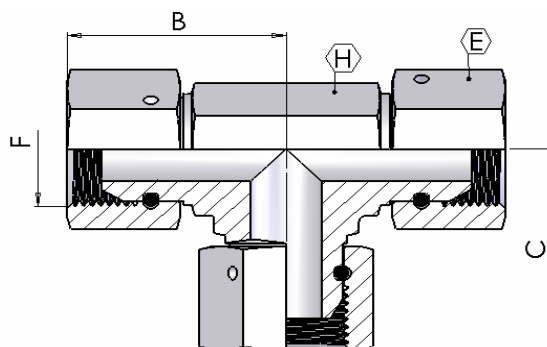

part number	Dimensions					
	F	B	C	H	E	
4720-04	1/4-19	32	32	14	19	
4720-06	3/8-19	33	33	19	22	
4720-08	1/2-14	40	40	22	27	
4720-12	3/4-14	48	48	27	32	
4720-16	1-11	52	52	33	38	
4720-20	1.1/4-11	58	58	41	50	
4720-24	1.1/2-11	61	61	50	55	

2350 Коннектор гайка


Swivel Connector

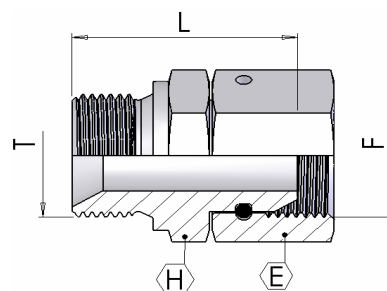

part number	Ø tube		Dimensions					
	mm	inch	T	F	L	H	E	
2350-02-02	6	1/4"	1/8-28	1/8-28	23	14	14	
2350-04-04	8	5/16"	1/4-19	1/4-19	32	19	19	
2350-04-06	8	5/16"	1/4-19	3/8-19	33	19	22	
2350-06-04	10	3/8"	3/8-19	1/4-19	31	22	19	
2350-06-06	10	3/8"	3/8-19	3/8-19	35	22	22	
2350-06-08	10	3/8"	3/8-19	1/2-19	36	22	27	
2350-06-12	10	3/8"	3/8-19	3/4-14	39	27	32	
2350-08-06	12	1/2"	1/2-14	3/8-19	38	27	22	
2350-08-08	12	1/2"	1/2-14	1/2-14	40	27	27	
2350-08-10	12	1/2"	1/2-14	5/8-14	37	27	30	
2350-08-12	12	1/2"	1/2-14	3/4-14	42	27	32	
2350-10-10	16	5/8"	5/8-14	5/8-14	41	30	30	
2350-12-08	20	3/4"	3/4-14	1/2-14	42	32	27	
2350-12-12	20	3/4"	3/4-14	3/4-14	44	32	32	
2350-12-16	20	3/4"	3/4-14	1-11	44	32	38	
2350-16-12	25	1"	1-11	3/4-19	47	41	32	
2350-16-16	25	1"	1-11	1-11	49	41	38	
2350-20-20	32	1.1/4"	1.1/4-11	1.1/4-11	55	50	50	
2350-24-20	38	1.1/2"	1.1/2-11	1.1/4-11	58	55	50	
2350-24-24	38	1.1/2"	1.1/2-11	1.1/2-11	58	55	55	
2350-32-32	51	2"	2-11	2-11	62	70	70	

4500 Коннектор гайка 90°


Swivel 90° Elbow

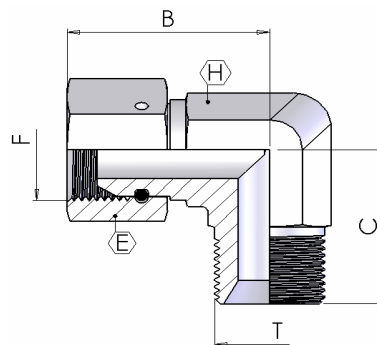

part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
4500-04	8	5/16"	1/4-19	1/4-19	31	26	14	19	
4500-06	10	3/8"	3/8-19	3/8-19	37	32	19	22	
4500-08	12	1/2"	1/2-14	1/2-14	42	36	22	27	
4500-12	20	3/4"	3/4-14	3/4-14	48	40	27	32	
4500-16	25	1"	1-11	1-11	52	42	33	38	
4500-20	32	1.1/4"	1.1/4-11	1.1/4-11	58	52	41	50	
4500-24	38	1.1/2"	1.1/2-11	1.1/2-11	61	59	50	55	

4510 Коннектор гайка 45°

Swivel 45° Elbow

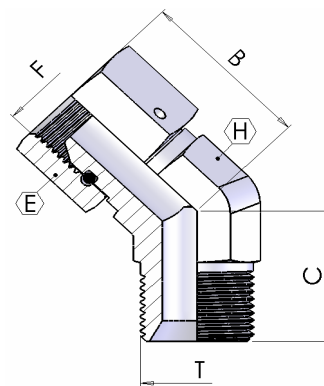


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
4510-04	8	5/16"	1/4-19	1/4-19	26	21	14	19	
4510-06	10	3/8"	3/8-19	3/8-19	30	25	19	22	
4510-08	12	1/2"	1/2-14	1/2-14	34	28	22	27	
4510-12	20	3/4"	3/4-14	3/4-14	41	33	27	32	
4510-16	25	1"	1-11	1-11	49	39	33	38	
4510-20	32	1.1/4"	1.1/4-11	1.1/4-11			41	50	
4510-24	38	1.1/2"	1.1/2-11	1.1/2-11			50	55	

3200

Коннектор гайка 90° сварной

Swivel 90° Elbow (welded)

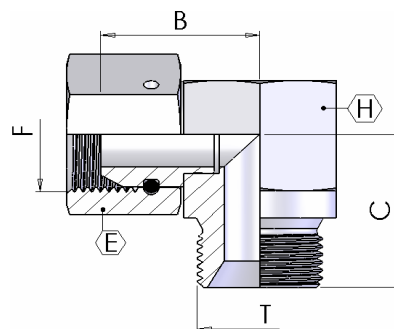


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
3200-02-02	6	1/4"	1/8-28	1/8-28	17	16	14	14	
3200-04-04	8	5/16"	1/4-19	1/4-19	20	23	19	19	
3200-06-06	10	3/8"	3/8-19	3/8-19	24	25	22	22	
3200-08-08	12	1/2"	1/2-14	1/2-14	28	31	27	27	
3200-12-12	20	3/4"	3/4-14	3/4-14	33	35	32	32	
3200-16-16	25	1"	1-11	1-11	39	43	41	38	

3320

Адаптер вращающийся 45° (штамповка)

Swivel 45° Elbow (Forged)

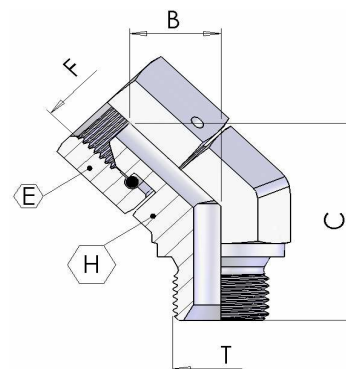


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
3320-04-04	8	5/16"	1/4-19	1/4-19	14	33	19	19	
3320-06-06	10	3/8"	3/8-19	3/8-19	16	37	22	22	
3320-08-08	12	1/2"	1/2-14	1/2-14	20	45	27	27	
3320-12-12	20	3/4"	3/4-14	3/4-14	22	53	32	32	
3320-16-16	25	1"	1-11	1-11	27	58	41	38	

2550

Коннектор гайка 90° сварной

Swivel 90° Elbow (welded)

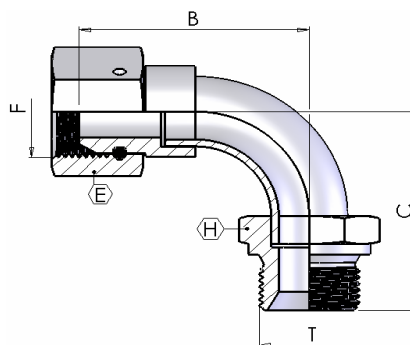


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
2550-04-04	8	5/16"	1/4-19	1/4-19	30	32	19	19	
2550-06-06	10	3/8"	3/8-19	3/8-19	37	38	22	22	
2550-08-08	12	1/2"	1/2-14	1/2-14	44	43	27	27	
2550-12-12	20	3/4"	3/4-14	3/4-14	59	62	32	32	
2550-16-16	25	1"	1-11	1-11	66	68	41	38	
2550-20-20	32	1.1/4"	1.1/4-11	1.1/4-11	71	76	50	50	
2550-24-24	38	1.1/2"	1.1/2-11	1.1/2-11	89	93	55	55	
2550-32-32	51	2"	2-11	2-11	113	123	65	70	

2650

Коннектор гайка 45° сварной


Swivel 45° Elbow (welded)

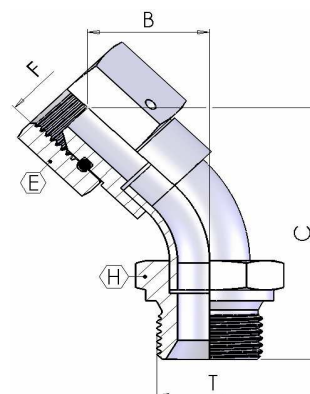

part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
2650-04-04	8	5/16"	1/4-19	1/4-19	17	44	19	19	
2650-06-06	10	3/8"	3/8-19	3/8-19	20	52	22	22	
2650-08-08	12	1/2"	1/2-14	1/2-14	23	53	27	27	
2650-12-12	20	3/4"	3/4-14	3/4-14	29	73	32	32	
2650-16-16	25	1"	1-11	1-11	35	85	41	38	
2650-20-20	32	1.1/4"	1.1/4-11	1.1/4-11	33	84	50	50	
2650-24-24	38	1.1/2"	1.1/2-11	1.1/2-11	41	103	55	55	
2650-32-32	51	2"	2-11	2-11	53	134	65	70	

2450 Коннектор гайка


Swivel Connector

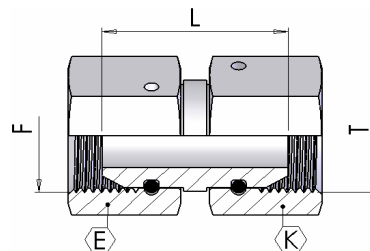

part number	Dimensions						
	F	T	L	K	E		
2450-04-04	1/4-19	1/4-19	22	19	19		
2450-06-06	3/8-19	3/8-19	29	22	22		
2450-08-08	1/2-14	1/2-14	32	27	27		
2450-10-10	5/8-14	5/8-14	29	30	30		
2450-12-12	3/4-14	3/4-14	37	32	32		
2450-16-16	1-11	1-11	43	38	38		
2450-20-20	1.1/4-11	1.1/4-11	50	50	50		
2450-24-24	1.1/2-11	1.1/2-11	53	55	55		
2450-32-32	2-11	2-11	50	70	70		

4550 Коннектор гайка 90°

Swivel 90° Elbow

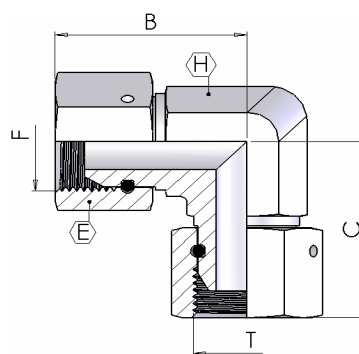


part number	Dimensions						
	F	T	B	C	H	E	
4550-04	1/4-19	1/4-19	31	31	14	19	
4550-06	3/8-19	3/8-19	37	37	19	22	
4550-08	1/2-14	1/2-14	40	36	22	27	
4550-12	3/4-14	3/4-14	48	48	27	32	
4550-16	1-11	1-11	52	52	33	38	
4550-20	1.1/4-11	1.1/4-11	58	58	41	50	
4550-24	1.1/2-11	1.1/2-11	61	61	50	55	

2750

Коннектор гайка 90° сварной

Swivel 90° Elbow (welded)

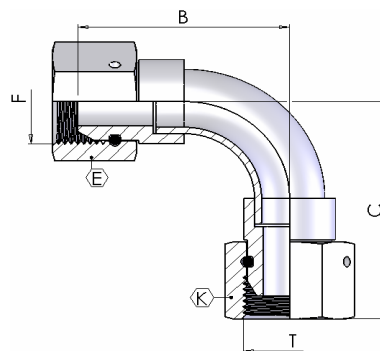


part number	Dimensions						
	F	T	B	C	K	E	
2750-04-04	1/4-19	1/4-19	30	35	19	19	
2750-06-06	3/8-19	3/8-19	37	43	22	22	
2750-08-08	1/2-14	1/2-14	44	19	27	27	
2750-12-12	3/4-14	3/4-14	59	67	32	32	
2750-16-16	1-11	1-11	66	76	38	38	
2750-20-20	1.1/4-11	1.1/4-11	71	50	50	50	
2750-24-24	1.1/2-11	1.1/2-11	89	98	55	55	
2750-32-32	2-11	2-11	113	127	70	70	

2850

Коннектор гайка 45° сварной


Swivel 45° Elbow (welded)

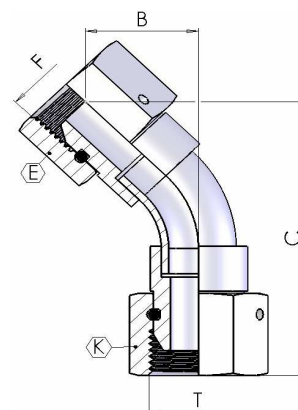

part number	Dimensions						
	F	T	B	C	K	E	
2850-04-04	1/4-19	1/4-19	17	47	19	19	
2850-06-06	3/8-19	3/8-19	20	57	22	22	
2850-08-08	1/2-14	1/2-14	23	59	27	27	
2850-12-12	3/4-14	3/4-14	29	79	32	32	
2850-16-16	1-11	1-11	35	93	38	38	
2850-20-20	1.1/4-11	1.1/4-11	33	87	50	50	
2850-24-24	1.1/2-11	1.1/2-11	41	108	55	55	
2850-32-32	2-11	2-11	53	139	70	70	

4570 Коннектор 90°


90° Elbow Union

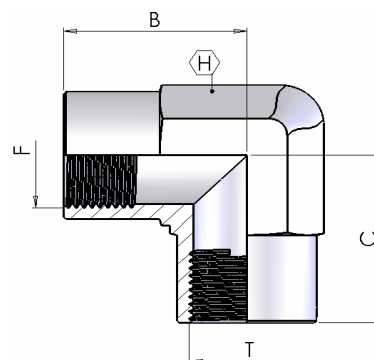

part number	Dimensions					
	F	T	B	C	H	
4570-04	1/4-19	1/4-19	27	27	19	
4570-06	3/8-19	3/8-19	34	34	22	
4570-08	1/2-14	1/2-14	36	36	27	
4570-12	3/4-14	3/4-14	46	46	32	
4570-16	1-11	1-11	50	50	41	

4820 Коннектор Т-образный


Union Tee

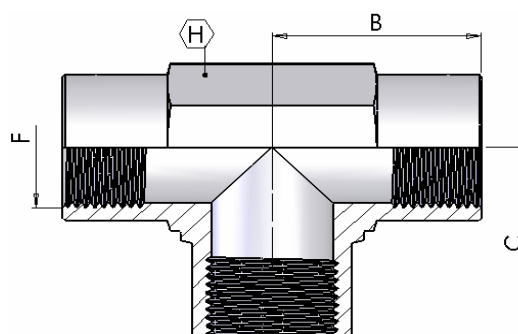

part number	Dimensions				
	F	B	C	H	
4820-04	1/4-19	27	27	19	
4820-06	3/8-19	32	32	22	
4820-08	1/2-14	36	36	27	
4820-12	3/4-14	43	43	32	
4820-16	1-11	52	52	41	

A105 **Коннектор**


Union

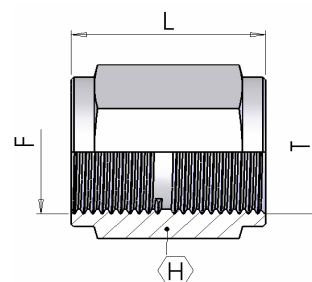

part number	Dimensions				
	F	T	L	H	
A105-02-02	1/8-28	1/8-28	21	14	
A105-02-06	1/8-28	3/8-19	29	22	
A105-04-04	1/4-19	1/4-19	29	19	
A105-04-06	1/4-19	3/8-19	31	22	
A105-06-06	3/8-19	3/8-19	29	22	
A105-08-08	1/2-14	1/2-14	34	27	
A105-12-12	3/4-14	3/4-14	38	32	
A105-16-16	1-11	1-11	43	41	
A105-20-20	1.1/4-11	1.1/4-11	47	50	
A105-24-24	1.1/2-11	1.1/2-11	51	55	
A105-32-32	2-11	2-11	57	70	

A608 **Заглушка гайка**


Female Plug Swivel

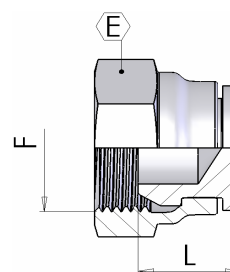

part number	Dimensions			
	F	L	E	
A608-02	1/8-28	11	14	
A608-04	1/4-19	14	19	
A608-06	3/8-19	15	22	
A608-08	1/2-14	16	27	
A608-10	5/8-14	16	30	
A608-12	3/4-14	18	32	
A608-16	1-11	20	38	
A608-20	1.1/4-11	24	50	
A608-24	1.1/2-11	27	55	
A608-32	2-11	24	70	

A604 Заглушка гайка


Female Plug

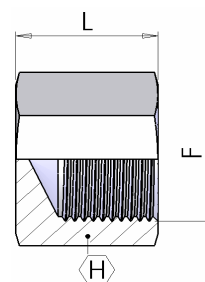

part number	Dimensions			
	F	L	H	
A604-02	1/8-28	16	14	
A604-04	1/4-19	19	19	
A604-06	3/8-19	21	22	
A604-08	1/2-14	23	27	
A604-10	5/8-14	25	30	
A604-12	3/4-14	28	32	
A604-16	1-11	31	41	
A604-20	1.1/4-11	36	50	
A604-24	1.1/2-11	41	55	
A604-32	2-11	46	70	

A605 Заглушка штуцер

Male plug

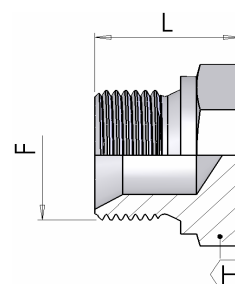


part number	Dimensions			
	F	L	H	
A605-02	1/8-28	15	14	
A605-04	1/4-19	19	19	
A605-06	3/8-19	22	22	
A605-08	1/2-14	25	27	
A605-10	5/8-14	27	30	
A605-12	3/4-14	27	32	
A605-16	1-11	30	41	
A605-20	1.1/4-11	34	50	
A605-24	1.1/2-11	39	55	
A605-32	2-11	43	70	

A051 Адаптер приварной гайка

Swivel Female Weldable End

гальваническое покрытие:
surface treatment:

без оцинковки
without zinc plating

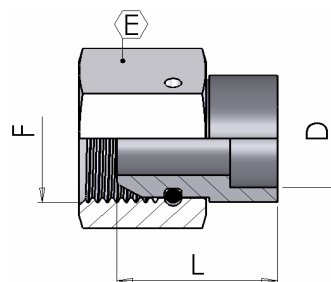


part number	Dimensions				
	F	L	D	E	
A051-02	1/8-28	16	6	14	
A051-04	1/4-19	18	8	19	
A051-06	3/8-19	21	12	22	
A051-08	1/2-14	24	14	27	
A051-10	5/8-14	23	18	30	
A051-12	3/4-14	29	20	32	
A051-16	1-11	28	25	38	
A051-20	1.1/4-11	30	32	50	
A051-24	1.1/2-11	31	38	55	
A051-32	2-11	33	50	70	

1850 Адаптер приварной штуцер

Male Weldable End

гальваническое покрытие:
surface treatment:

без оцинковки
without zinc plating

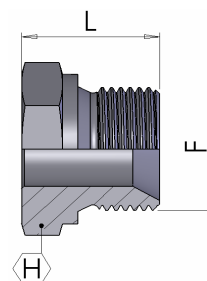


part number	Dimensions			
	F	L	H	
1850-02	1/8-28	15	14	
1850-04	1/4-19	20	19	
1850-06	3/8-19	22	22	
1850-08	1/2-14	25	27	
1850-10	5/8-14	27	30	
1850-12	3/4-14	27	32	
1850-16	1-11	30	41	
1850-20	1.1/4-11	34	50	
1850-24	1.1/2-11	35	55	
1850-32	2-11	43	70	

220C **Адаптер приварной штуцер**

Male Weldable End

гальваническое покрытие:
surface treatment:

без оцинковки
without zinc plating

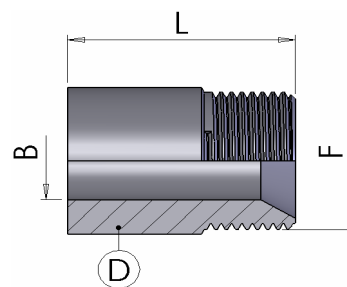


part number	Dimensions				
	F	L	B	D	
220C-04	1/4-19	30	7	14	
220C-06	3/8-19	32	9	17	
220C-08	1/2-14	34	12	21	
220C-12	3/4-14	40	15	28	
220C-16	1-11	41	20	35	

2200 **Коннектор приварной**

Threaded Sleeve

гальваническое покрытие:
surface treatment:


без оцинковки
without zinc plating

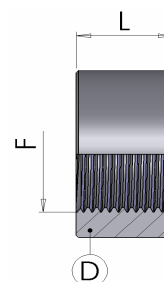

part number	Dimensions			
	F	L	D	
2200-02	1/8-28	14	20	
2200-04	1/4-19	16	22	
2200-06	3/8-19	17	26	
2200-08	1/2-14	18	30	
2200-10	5/8-14	20	32	
2200-12	3/4-14	20	38	
2200-16	1-11	25	45	
2200-20	1.1/4-11	25	55	
2200-24	1.1/2-11	30	62	
2200-32	2-11	30	70	

1865 **Адаптер, BSP/BSPT**

Male Connector BSP/BSPT

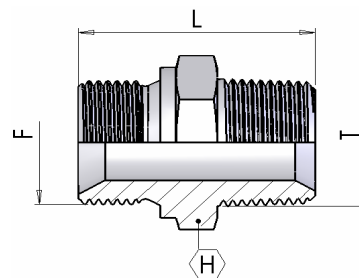

Резьба / Thread:

BSPT (Form C DIN 3852)


part number	Ø tube		Dimensions				
	mm	inch	F	T	L	H	
1865-02-02	6	1/4"	1/8-28	1/8-28	24	14	
1865-04-04	8	5/16"	1/4-19	1/4-19	34	19	
1865-06-06	10	3/8"	3/8-19	3/8-19	36	22	
1865-08-08	12	1/2"	1/2-14	1/2-14	43	27	
1865-08-12	12	1/2"	1/2-14	3/4-14	46	27	
1865-12-12	20	3/4"	3/4-14	3/4-14	46	32	
1865-12-20	20	3/4"	3/4-14	1.1/4-11	55	46	
1865-16-16	25	1"	1-11	1-11	54	41	
1865-20-20	32	1.1/4"	1.1/4-11	1.1/4-11	59	50	
1865-24-24	38	1.1/2"	1.1/2-11	1.1/2-11	60	55	
1865-32-32	51	2"	2-11	2-11	69	70	

2360 **Адаптер, BSP/BSPT**

Swivel Connector Female BSP/ Male BSPT

Резьба / Thread:

BSPT (Form C DIN 3852)

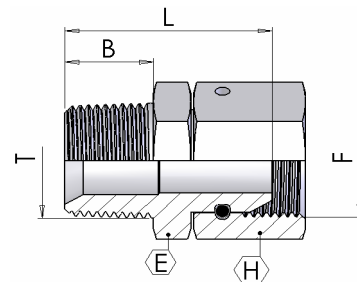


part number	Ø tube		Dimensions						
	mm	inch	F	T	L	B	E	H	
2360-02-02	6	1/4"	1/8"	1/8"	29	10	11	14	
2360-04-02	6	1/4"	1/8"	1/4"	33	15	14	14	
2360-04-04	8	5/16"	1/4"	1/4"	33	15	14	19	
2360-04-06	10	3/8"	3/8"	1/4"	36	15	16	22	
2360-06-04	8	5/16"	1/4"	3/8"	34	15	19	19	
2360-06-06	10	3/8"	3/8"	3/8"	36	15	19	22	
2360-06-08	12	1/2"	1/2"	3/8"	40	15	22	27	
2360-08-06	10	3/8"	3/8"	1/2"	42	19	22	22	
2360-08-08	12	1/2"	1/2"	1/2"	41	18	22	27	
2360-08-12	20	3/4"	3/4"	1/2"	47	19	27	32	
2360-12-08	12	1/2"	1/2"	3/4"	47	19	27	27	
2360-12-12	20	3/4"	3/4"	3/4"	47	19	27	32	
2360-12-16	25	1"	1"	3/4"	55	19	32	41	
2360-16-12	20	3/4"	3/4"	1"	54	24	36	32	
2360-16-16	25	1"	1"	1"	60	24	36	41	
2360-16-20	32	1.1/4"	1.1/4"	1"	62	24	41	50	
2360-20-20	32	1.1/4"	1.1/4"	1.1/4"	62	25	46	50	
2360-20-24	38	1.1/2"	1.1/2"	1.1/4"	66	25	46	60	
2360-24-24	38	1.1/2"	1.1/2"	1.1/2"	67	26	50	60	

4860 **Т-образный адаптер, BSPT**

BSPT Branch Tee

Резьба / Thread:


BSPT (Form C DIN 3852)

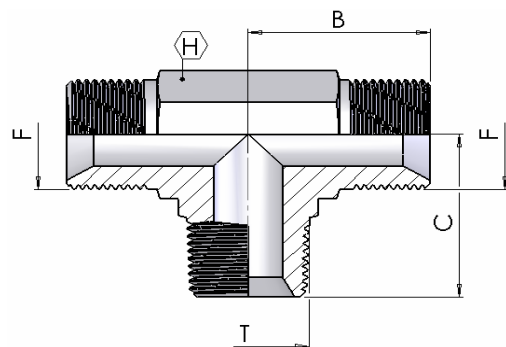

part number	Ø tube		Dimensions					
	mm	inch	F	T	B	C	H	
4860-04	8	5/16"	1/4-19	1/4-19	27	27	14	
4860-06	10	3/8"	3/8-19	3/8-19	28	28	19	
4860-08	12	1/2"	1/2-14	1/2-14	34	34	22	
4860-12	20	3/4"	3/4-14	3/4-14	40	40	27	
4860-16	25	1"	1-11	1-11	42	42	33	
4860-20	32	1.1/4"	1.1/4-11	1.1/4-11	52	52	41	

4620 **Адаптер 90°BSP x BSPT**

90° connector BSP male x BSPT male

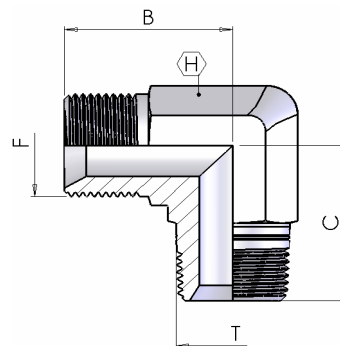


Резьба / Thread:

BSPT (Form C DIN 3852)

part number	Ø tube		Dimensions					
	mm	inch	F	T	B	C	H	
4620-02	6	1/4"	1/8-28	1/8-28	26	26	14	
4620-04	8	5/16"	1/4-19	1/4-19	26	26	14	
4620-06	10	3/8"	3/8-19	3/8-19	32	32	19	
4620-08	12	1/2"	1/2-14	1/2-14	36	36	22	
4620-12	20	3/4"	3/4-14	3/4-14	40	40	27	
4620-16	25	1"	1-11	1-11	42	42	33	
4620-20	32	1.1/4"	1.1/4-11	1.1/4-11	52	52	41	
4620-24	38	1.1/2"	1.1/2-11	1.1/2-11	59	59	50	

4630 **Адаптер 45°BSP x BSPT**

45° connector BSP male x BSPT male

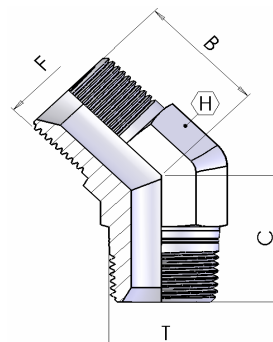

Резьба / Thread:

BSPT (Form C DIN 3852)


part number	Ø tube		Dimensions					
	mm	inch	F	T	B	C	H	
4630-04	8	5/16"	1/4-19	1/4-19	21	21	14	
4630-06	10	3/8"	3/8-19	3/8-19	25	25	19	
4630-08	12	1/2"	1/2-14	1/2-14	28	28	22	
4630-12	20	3/4"	3/4-14	3/4-14	33	33	27	
4630-16	25	1"	1-11	1-11	41	41	33	
4630-20	32	1.1/4"	1.1/4-11	1.1/4-11			41	
4630-24	38	1.1/2"	1.1/2-11	1.1/2-11			50	

4600 **Адаптер 90°BSP x BSPT**

90° connector BSP swivel female x BSPT male

Резьба / Thread:

BSPT (Form C DIN 3852)

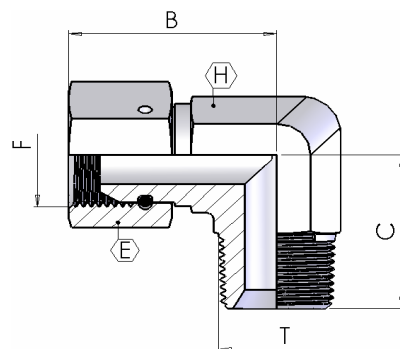


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
4600-04	8	5/16"	1/4-19	1/4-19	29	27	14	19	
4600-06	10	3/8"	3/8-19	3/8-19	34	32	19	22	
4600-08	12	1/2"	1/2-14	1/2-14	42	36	22	27	
4600-12	20	3/4"	3/4-14	3/4-14	48	40	27	32	
4600-16	25	1"	1-11	1-11	58	48	33	38	
4600-20	32	1.1/4"	1.1/4-11	1.1/4-11	58	52	41	50	
4600-24	38	1.1/2"	1.1/2-11	1.1/2-11	61	59	50	55	

4610 **Адаптер 45°BSP x BSPT**

45° connector BSP swivel female x BSPT male

Резьба / Thread:


BSPT (Form C DIN 3852)

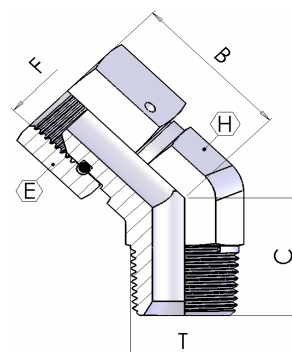

part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
4610-04	8	5/16"	1/4-19	1/4-19	22	21	14	19	
4610-06	10	3/8"	3/8-19	3/8-19	27	25	19	22	
4610-08	12	1/2"	1/2-14	1/2-14	31	28	22	27	
4610-12	20	3/4"	3/4-14	3/4-14	37	31	27	32	
4610-16	25	1"	1-11	1-11	40	37	33	38	
4610-20	32	1.1/4"	1.1/4-11	1.1/4-11			41	50	
4610-24	38	1.1/2"	1.1/2-11	1.1/2-11			50	55	

1875 **Адаптер BSP/NPTF**

Male Connector BSP/NPTF

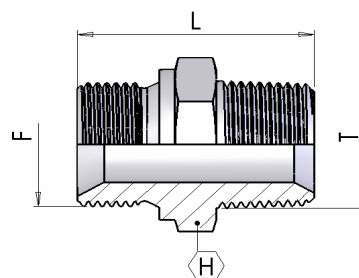

Резьба / Thread:

NPT (ANSI/ASME B1, 20, 1-1983)


part number	Ø tube		Dimensions				
	mm	inch	F	T	L	H	
1875-04-04	8	5/16"	1/4-19	1/4-18	35	19	
1875-04-06	8	5/16"	1/4-19	3/8-18	35	19	
1875-04-08	8	5/16"	1/4-19	1/2-14	41	22	
1875-06-04	10	3/8"	3/8-19	1/4-18	36	22	
1875-06-06	10	3/8"	3/8-19	3/8-18	36	22	
1875-06-08	10	3/8"	3/8-19	1/2-14	41	22	
1875-08-06	12	1/2"	1/2-14	3/8-18	39	27	
1875-08-08	12	1/2"	1/2-14	1/2-14	44	27	
1875-08-12	12	1/2"	1/2-14	3/4-14	46	27	
1875-12-08	20	3/4"	3/4-14	1/2-14	46	32	
1875-12-12	20	3/4"	3/4-14	3/4-14	48	32	
1875-12-16	20	3/4"	3/4-14	1-11.1/2	53	36	
1875-16-12	25	1"	1-11	3/4-14	49	41	
1875-16-16	25	1"	1-11	1-11.1/2	55	41	
1875-20-20	32	1.1/4"	1-1/4-11	1-1/4-11.1/2	59	50	
1875-20-24	32	1.1/4"	1-1/4-11	1-1/2-11.1/2	61	50	
1875-24-24	38	1.1/2"	1.1/2-11	1.1/2-11.1/2	63	55	
1875-32-32	51	2"	2-11	2-11.1/2	69	70	

2365 **Адаптер BSP / NPTF**

Swivel Connector Female BSP/ Male NPTF

Резьба / Thread:

NPT (ANSI/ASME B1, 20, 1-1983)

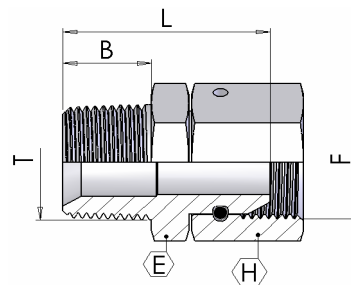


part number	Ø tube		Dimensions						
	mm	inch	F	T	L	B	E	H	
2365-02-02	6	1/4"	1/8-28	1/8-28	29	10	11	14	
2365-04-02	6	1/4"	1/8-28	1/4-18	33	15	14	14	
2365-04-04	8	5/16"	1/4-19	1/4-18	33	15	14	19	
2365-04-06	10	3/8"	3/8-19	1/4-18	36	15	16	22	
2365-06-04	8	5/16"	1/4-19	3/8-18	34	15	19	19	
2365-06-06	10	3/8"	3/8-19	3/8-18	36	15	19	22	
2365-06-08	12	1/2"	1/2-14	3/8-18	40	15	22	27	
2365-08-06	10	3/8"	3/8-19	1/2-14	42	19	22	22	
2365-08-08	12	1/2"	1/2-14	1/2-14	45	19	22	27	
2365-08-12	20	3/4"	3/4-14	1/2-14	47	19	27	32	
2365-12-08	12	1/2"	1/2-14	3/4-14	47	19	27	27	
2365-12-12	20	3/4"	3/4-14	3/4-14	47	19	27	32	
2365-12-16	25	1"	1-11	3/4-14	55	19	32	41	
2365-16-12	20	3/4"	3/4-14	1-11.1/2	54	24	36	32	
2365-16-16	25	1"	1-11	1-11.1/2	60	24	36	41	
2365-16-20	32	1.1/4"	1.1/4-11	1-11.1/2	62	24	41	50	
2365-20-20	32	1.1/4"	1.1/4-11	1.1/4-11.1/2	62	25	46	50	
2365-20-24	38	1.1/2"	1.1/2-11	1.1/4-11.1/2	66	25	46	60	
2365-24-24	38	1.1/2"	1.1/2-11	1.1/2-11.1/2	67	26	50	60	

4870 **Тройник NPTF X JIS**

NPTF male branch Tee

Резьба / Thread:


NPT (ANSI/ASME B1, 20, 1-1983)

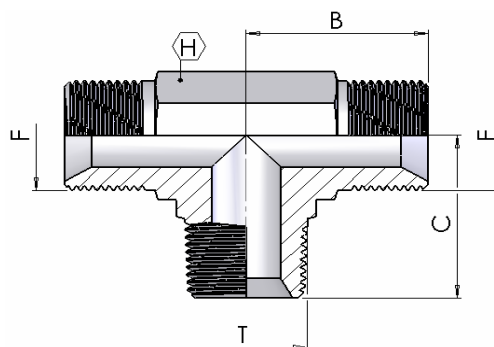

part number	Ø tube		Dimensions					
	mm	inch	F	T	B	C	H	
4870-04	8	5/16"	1/4-19	1/4-18	27	27	14	
4870-06	10	3/8"	3/8-19	3/8-18	32	32	19	
4870-08	12	1/2"	1/2-14	1/2-14	36	37	22	
4870-12	20	3/4"	3/4-14	3/4-14	40	40	27	
4870-16	25	1"	1-11	1-11.1/2	50	50	33	
4870-20	32	1.1/4"	1.1/4-11	1.1/4-11.1/2	52	52	41	

4670 **Адаптер 90° BSP/ NPTF**

90° connector BSP male x NPTF male

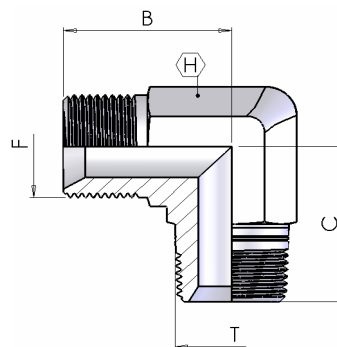


Резьба / Thread:

NPT (ANSI/ASME B1, 20, 1-1983)

part number	Ø tube		Dimensions					
	mm	inch	F	T	B	C	H	
4670-04	8	5/16"	1/4-19	1/4-18	26	26	14	
4670-06	10	3/8"	3/8-19	3/8-18	32	32	19	
4670-08	12	1/2"	1/2-14	1/2-14	36	36	22	
4670-12	20	3/4"	3/4-14	3/4-14	40	40	27	
4670-16	25	1"	1-11	1-11.1/2	42	42	33	
4670-20	32	1.1/4"	1.1/4-11	1.1/4-11.1/2	52	52	41	
4670-24	38	1.1/2"	1.1/2-11	1.1/2-11.1/2	59	59	50	

4680 **Адаптер 45° BSP/ NPTF**

45° connector BSP male x NPTF male

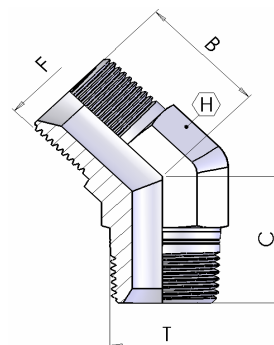


Резьба / Thread:

NPT (ANSI/ASME B1, 20, 1-1983)

part number	Ø tube		Dimensions					
	mm	inch	F	T	B	C	H	
4680-04	8	5/16"	1/4-19	1/4-18	21	21	14	
4680-06	10	3/8"	3/8-19	3/8-18	25	25	19	
4680-08	12	1/2"	1/2-14	1/2-14	30	28	22	
4680-12	20	3/4"	3/4-14	3/4-14	33	33	27	
4680-16	25	1"	1-11	1-11.1/2	41	41	33	
4680-20	32	1.1/4"	1.1/4-11	1.1/4-11.1/2	46	46	41	
4680-24	38	1.1/2"	1.1/2-11	1.1/2-11.1/2			50	

4650 **Адаптер 90° BSP / NPTF**

90° connector BSP swivel female x NPTF male

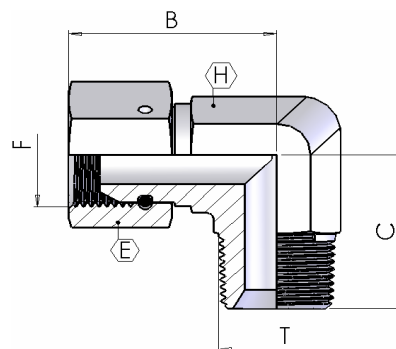


Резьба / Thread:

NPT (ANSI/ASME B1, 20, 1-1983)

part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
4650-04	8	5/16"	1/4-19	1/4-18	29	27	14	19	
4650-06	10	3/8"	3/8-19	3/8-18	34	32	19	22	
4650-08	12	1/2"	1/2-14	1/2-14	40	36	22	27	
4650-12	20	3/4"	3/4-14	3/4-14	46	40	27	32	
4650-16	25	1"	1-11	1-11.1/2	52	50	33	38	
4650-20	32	1.1/4"	1.1/4-11	1.1/4-11.1/2	54	52	41	50	
4650-24	38	1.1/2"	1.1/2-11	1.1/2-11.1/2	61	59	50	55	

4660 **Адаптер 45° BSP / NPTF**

45° connector BSP swivel female x NPTF male

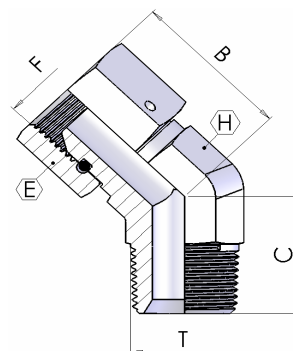


Резьба / Thread:

NPT (ANSI/ASME B1, 20, 1-1983)

part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
4660-04	8	5/16"	1/4-19	1/4-18	21	21	14	19	
4660-06	10	3/8"	3/8-19	3/8-18	25	25	19	22	
4660-08	12	1/2"	1/2-14	1/2-14	28	29	22	27	
4660-12	20	3/4"	3/4-14	3/4-14	33	33	27	32	
4660-16	25	1"	1-11	1-11.1/2	37	37	33	38	
4660-20	32	1.1/4"	1.1/4-11	1.1/4-11.1/2			41	50	
4660-24	38	1.1/2"	1.1/2-11	1.1/2-11.1/2			50	55	

3900 Регулируемый адаптер 90° BSP

Adjustable Elbow BSP/BSP

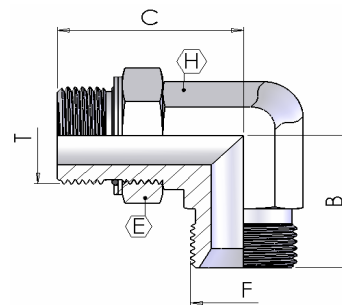

Резьба / Thread:


BSPP (ISO 1179-3)

part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
3900-02-02	6	1/4"	1/8	1/8	23	26	12	14	
3900-04-02	6	1/4"	1/8	1/4	27	32	14	19	
3900-04-04	8	5/16"	1/4	1/4	27	32	14	19	
3900-04-06	10	3/8"	3/8	1/4	32	34	19	19	
3900-06-02	6	1/4"	1/8	3/8	29	37	19	24	
3900-06-04	8	5/16"	1/4	3/8	29	37	19	24	
3900-06-06	10	3/8"	3/8	3/8	32	37	19	24	
3900-06-08	12	1/2"	1/2	3/8	37	40	22	24	
3900-08-04	8	5/16"	1/4	1/2	31	43	22	27	
3900-08-06	10	3/8"	3/8	1/2	34	43	22	27	
3900-08-08	12	1/2"	1/2	1/2	37	43	22	27	
3900-08-12	20	3/4"	3/4	1/2	42	46	27	27	
3900-12-06	10	3/8"	3/8	3/4	37	49	27	36	
3900-12-08	12	1/2"	1/2	3/4	40	49	27	36	
3900-12-12	20	3/4"	3/4	3/4	42	49	27	36	
3900-12-16	25	1"	1	3/4	46	52	33	36	
3900-16-12	20	3/4"	3/4	1	45	52	33	41	
3900-16-16	25	1"	1	1	46	52	33	41	
3900-16-20	32	1.1/4"	1.1/4	1	52	57	41	41	
3900-20-16	25	1"	1	1.1/4	51	57	41	50	
3900-20-20	32	1.1/4"	1.1/4	1.1/4	52	57	41	50	
3900-24-24	38	1.1/2"	1.1/2	1.1/2	59	61	48	60	

3255 Регулируемый адаптер 90°BSP/BSP

Adjustable 90° Elbow Swivel Female BSP/BSPP
Male

Резьба / Thread:
BSPP (ISO 1179-3)

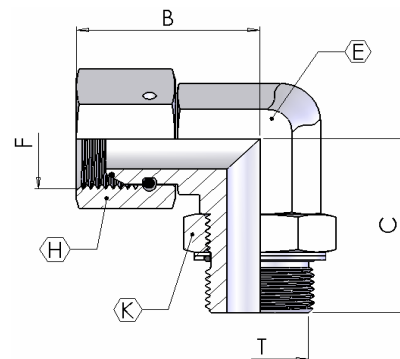


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	E	H	K
3255-02-02	6	1/4"	1/8"	1/8"	25	26	12	14	14
3255-04-04	8	5/16"	1/4"	1/4"	27	32	14	19	19
3255-06-06	10	3/8"	3/8"	3/8"	32	37	19	22	24
3255-08-08	12	1/2"	1/2"	1/2"	37	43	22	27	27
3255-12-12	20	3/4"	3/4"	3/4"	42	49	27	32	36
3255-16-16	25	1"	1"	1"	46	52	33	41	41
3255-20-20	32	1.1/4"	1.1/4"	1.1/4"	52	57	41	50	50
3255-24-24	38	1.1/2"	1.1/2"	1.1/2"	59	61	48	60	60

3600 Регулируемый тройник BSP, боковое подключение

Adjustable Run Tee BSP/BSPP Male

Резьба / Thread:
BSPP (ISO 1179-3)

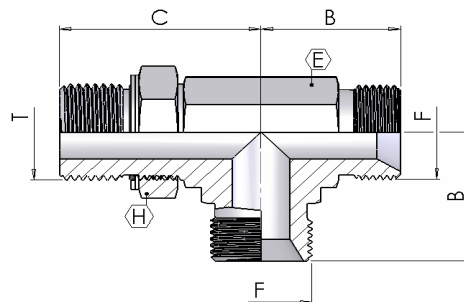


part number	Ø tube		Dimensions					
	mm	inch	F	T	B	C	E	H
3600-02-02	6	1/4"	1/8-28	1/8-28	23	26	12	14
3600-04-02	6	1/4"	1/8-28	1/4-19	27	32	14	19
3600-04-04	8	5/16"	1/4-19	1/4-19	27	32	14	19
3600-04-06	10	3/8"	3/8-19	1/4-19	32	34	19	19
3600-06-04	8	5/16"	1/4-19	3/8-19	29	37	19	24
3600-06-06	10	3/8"	3/8-19	3/8-19	32	37	19	24
3600-06-08	12	1/2"	1/2-14	3/8-19	37	49	27	36
3600-08-06	10	3/8"	3/8-19	1/2-14	34	43	22	27
3600-08-08	12	1/2"	1/2-14	1/2-14	37	40	22	24
3600-08-12	12	3/4"	1/2-14	1/2-14	40	49	27	36
3600-12-08	12	1/2"	1/2-14	3/4-11	37	43	22	27
3600-12-12	20	3/4"	3/4-11	3/4-11	42	46	27	27
3600-12-16	25	1"	1-11	3/4-11	45	52	33	41
3600-16-12	20	3/4"	3/4-11	1-11	42	49	27	36
3600-16-16	25	1"	1-11	1-11	46	52	33	36
3600-16-20	32	1.1/4"	1.1/4-11	1-11	46	52	33	41
3600-20-20	32	1.1/4"	1.1/4-11	1.1/4-11	51	57	41	50
3600-20-24	38	1.1/2"	1.1/2-11	1.1/4-11	52	57	41	50
3600-24-20	32	1.1/4"	1.1/4-11	1.1/2-11	52	57	41	41
3600-24-24	38	1.1/2"	1.1/2-11	1.1/2-11	59	61	48	60

3605

Регулируемый тройник BSP, нижнее подключение

Adjustable Branch Tee BSP/BSPP Male


Резьба / Thread:
BSPP (ISO 1179-3)

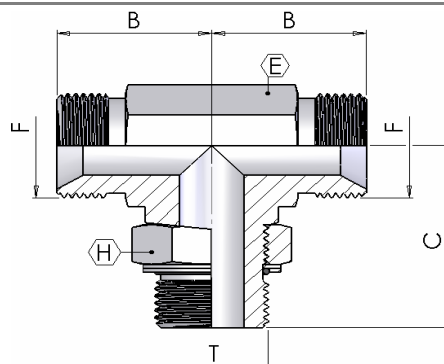

part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	E	H	
3605-02-02	6	1/4"	1/8-28	1/8-28	23	26	12	14	
3605-04-02	6	1/4"	1/8-28	1/4-19	27	32	14	19	
3605-04-04	8	5/16"	1/4-19	1/4-19	27	32	14	19	
3605-04-06	10	3/8"	3/8-19	1/4-19	32	34	19	19	
3605-06-04	8	5/16"	1/4-19	3/8-19	29	37	19	24	
3605-06-06	10	3/8"	3/8-19	3/8-19	32	37	19	24	
3605-06-08	12	1/2"	1/2-14	3/8-19	37	49	27	36	
3605-08-06	10	3/8"	3/8-19	1/2-14	34	43	22	27	
3605-08-08	12	1/2"	1/2-14	1/2-14	37	40	22	24	
3605-08-12	12	3/4"	3/4-11	1/2-14	40	49	27	36	
3605-12-08	12	1/2"	1/2-14	3/4-11	37	43	22	27	
3605-12-12	20	3/4"	3/4-11	3/4-11	42	46	27	27	
3605-12-16	25	1"	1-11	3/4-11	45	52	33	41	
3605-16-12	20	3/4"	3/4-11	1-11	42	49	27	36	
3605-16-16	25	1"	1-11	1-11	46	52	33	36	
3605-16-20	32	1.1/4"	1.1/4-11	1-11	46	52	33	41	
3605-20-20	32	1.1/4"	1.1/4-11	1.1/4-11	51	57	41	50	
3605-20-24	38	1.1/2"	1.1/2-11	1.1/4-11	52	57	41	50	
3605-24-20	32	1.1/4"	1.1/4-11	1.1/2-11	52	57	41	41	
3605-24-24	38	1.1/2"	1.1/2-11	1.1/2-11	59	61	48	60	

1805 Коннектор BSP/ метрика 60°

Male connector BSP male /Metric 60°
cone

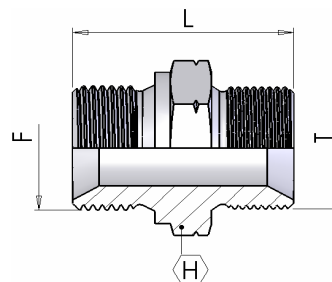


Резьба / Thread:

Metric (DIN 7631)

part number	Ø tube		Dimensions				
	mm	inch	T	F	L	H	
1805-02-10	6	1/4"	1/8-28	M10 x 1	28	14	
1805-04-10	8	5/16"	1/4-19	M10 x 1	28	19	
1805-04-12	8	5/16"	1/4-19	M12 x 1.5	33	19	
1805-04-14	8	5/16"	1/4-19	M14 x 1.5	32	19	
1805-04-16	8	5/16"	1/4-19	M16 x 1.5	33	22	
1805-04-18	8	5/16"	1/4-19	M18 x 1.5	34	24	
1805-04-22	8	5/16"	1/4-19	M22 x 1.5	36	27	
1805-06-14	10	3/8"	3/8-19	M14 x 1.5	32	22	
1805-06-16	10	3/8"	3/8-19	M16 x 1.5	33	22	
1805-06-18	10	3/8"	3/8-19	M18 x 1.5	36	24	
1805-06-20	10	3/8"	3/8-19	M20 x 1.5	37	27	
1805-06-22	10	3/8"	3/8-19	M22 x 1.5	37	27	
1805-08-14	12	1/2"	1/2-14	M14 x 1.5	37	27	
1805-08-16	12	1/2"	1/2-14	M16 x 1.5	37	27	
1805-08-18	12	1/2"	1/2-14	M18 x 1.5	38	27	
1805-08-20	12	1/2"	1/2-14	M20 x 1.5	39	27	
1805-08-22	12	1/2"	1/2-14	M22 x 1.5	38	27	
1805-10-18	16	5/8"	5/8-14	M18 x 1.5	39	28	
1805-10-22	16	5/8"	5/8-14	M22 x 1.5	41	28	
1805-12-18	20	3/4"	3/4-14	M18 x 1.5	39	32	
1805-12-22	20	3/4"	3/4-14	M22 x 1.5	41	32	
1805-12-26	20	3/4"	3/4-14	M26 x 1.5	43	32	
1805-12-30	20	3/4"	3/4-14	M30 x 1.5	46	36	
1805-16-22	25	1"	1-11	M22 x 1.5	44	41	
1805-16-26	25	1"	1-11	M26 x 1.5	46	41	
1805-16-38	25	1"	1-11	M38 x 1.5	48	46	

2370 Коннектор метрика 60° BSP


Swivel Nut Female Metric 60° cone/BSP

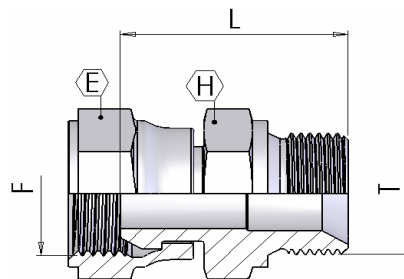

part number	Ø tube		Dimensions					
	mm	inch	F	T	L	E	H	
2370-16-06	10	3/8"	M16x1,5	3/8-19	35	22	22	
2370-16-08	12	1/2"	M16x1,5	1/2-14	38	22	27	
2370-18-06	10	3/8"	M18x1,5	3/8-19	35	24	22	
2370-18-08	12	1/2"	M18x1,5	1/2-14	38	24	27	
2370-20-08	12	1/2"	M20x1,5	1/2-14	40	27	27	

3510 Коннектор BSP/метрика DIN 3852-1

Male Connector BSP/Metric DIN 3852-1

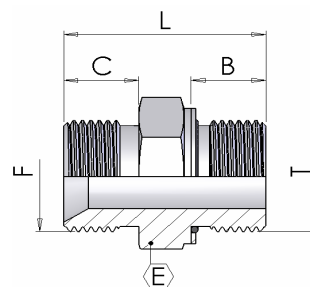

Резьба / Thread:


Metric Parallel

part number	Ø tube		Dimensions						
	mm	inch	F	T	L	B	C	E	
3510-10-02	6	1/4"	1/8-28	M10x1	24	9	8	16	
3510-12-02	6	1/4"	1/8-28	M12x1,5	27	12	8	17	
3510-14-04	8	5/16"	1/4-19	M14x1,5	31	11,5	11	19	
3510-16-04	8	5/16"	1/4-19	M16x1,5	32	13	11	22	
3510-16-06	10	3/8"	3/8-19	M16x1,5	33	12,5	12	22	
3510-18-06	10	3/8"	3/8-19	M18x1,5	35	14	12	24	
3510-18-08	12	1/2"	1/2-14	M18x1,5	37	13,5	14	24	
3510-22-08	12	1/2"	1/2-14	M22x1,5	39	15	14	30	
3510-22-12	20	3/4"	3/4-11	M22x1,5	42	15	16	30	
3510-27-12	20	3/4"	3/4-11	M27x2	47	19	16	36	
3510-27-16	25	1"	1-11	M27x2	50	18,5	19	36	
3510-33-16	25	1"	1-11	M33x2	50	19	19	41	
3510-42-20	32	1.1/4"	1.1/4-11	M42x2	54	19,5	20	50	
3510-48-24	38	1.1/2"	1.1/2-11	M48x2	60	22	22	60	

3515 Коннектор удлиненный BSP/метрика DIN 3852-2

Long Male Connector BSP/Metric DIN 3852-1

Резьба / Thread:
Metric Parallel

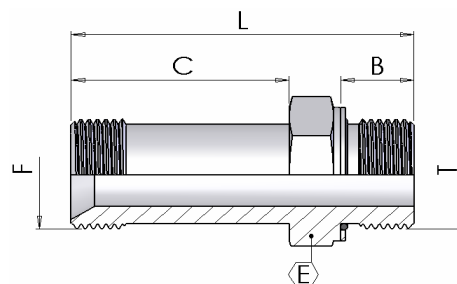


part number	Ø tube		Dimensions						
	mm	inch	F	T	L	B	C	E	
3515-10-02	6	1/4"	1/8-28	M10x1	45	9	29	16	
3515-12-02	6	1/4"	1/8-28	M12x1,5	48	12	29	17	
3515-14-04	8	5/16"	1/4-19	M14x1,5	56	12	36	19	
3515-16-04	8	5/16"	1/4-19	M16x1,5	57	13	36	22	
3515-16-06	10	3/8"	3/8-19	M16x1,5	64	13	43	22	
3515-18-06	10	3/8"	3/8-19	M18x1,5	66	14	43	24	
3515-18-08	12	1/2"	1/2-14	M18x1,5	70	14	48	24	
3515-22-08	12	1/2"	1/2-14	M22x1,5	73	15	48	30	
3515-22-12	20	3/4"	3/4-11	M22x1,5	83	15	57	30	
3515-27-12	20	3/4"	3/4-11	M27x2	88	19	57	36	
3515-27-16	25	1"	1-11	M27x2	99	19	68	36	
3515-33-16	25	1"	1-11	M33x2	99	19	68	41	
3515-42-20	32	1.1/4"	1.1/4-11	M42x2	117	20	84	50	
3515-48-24	38	1.1/2"	1.1/2-11	M48x2	130	22	93	60	

3560 Коннектор BSP/ метрика DIN 3852-1

Swivel Nut Female BSP/Metric DIN 3852-1

Резьба / Thread:
Metric Parallel

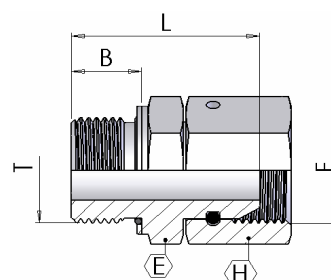


part number	Ø tube		Dimensions						
	mm	inch	F	T	L	B	E	H	
3560-10-02	6	1/4"	1/8"	M10x1	28	9	16	14	
3560-12-02	6	1/4"	1/8"	M12x1,5	30	12	17	14	
3560-14-04	8	5/16"	1/4"	M14x1,5	30	12	19	19	
3560-16-04	8	5/16"	1/4"	M16x1,5	32	13	22	19	
3560-16-06	10	3/8"	3/8"	M16x1,5	34	13	22	22	
3560-18-06	10	3/8"	3/8"	M18x1,5	35	14	24	22	
3560-18-08	12	1/2"	1/2"	M18x1,5	39	14	24	27	
3560-22-08	12	1/2"	1/2"	M22x1,5	41	15	30	27	
3560-22-12	20	3/4"	3/4"	M22x1,5	43	15	30	32	
3560-27-12	20	3/4"	3/4"	M27x2	47	19	36	32	
3560-27-16	25	1"	1"	M27x2	54	19	36	41	
3560-33-16	25	1"	1"	M33x2	54	19	41	41	
3560-42-20	32	1.1/4"	1.1/4"	M42x2	57	20	50	50	
3560-48-24	38	1.1/2"	1.1/2"	M48x2	63	22	60	60	

3910 Регулируемый адаптер 90° метрика DIN 3852-1/BSP

Adjustable Elbow BSP/Metric DIN 3852-1

Резьба / Thread:
Metric Parallel

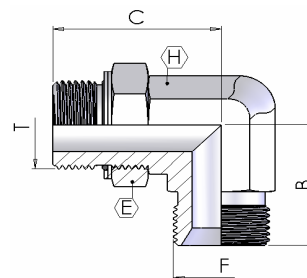


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
3910-10-02	6	1/4"	1/8"	M10x1	23	27	12	14	
3910-12-02	6	1/4"	1/8"	M12x1,5	27	32	14	17	
3910-14-04	8	5/16"	1/4"	M14x1,5	27	32	14	19	
3910-16-04	8	5/16"	1/4"	M16x1,5	29	38	19	22	
3910-16-06	10	3/8"	3/8"	M16x1,5	32	38	19	22	
3910-18-06	10	3/8"	3/8"	M18x1,5	32	40	19	24	
3910-18-08	12	1/2"	1/2"	M18x1,5	37	41	22	24	
3910-22-08	12	1/2"	1/2"	M22x1,5	37	43	22	27	
3910-22-12	20	3/4"	3/4"	M22x1,5	42	45	27	27	
3910-27-12	20	3/4"	3/4"	M27x2	42	52	27	36	
3910-27-16	25	1"	1"	M27x2	46	52	33	36	
3910-33-16	25	1"	1"	M33x2	46	53	33	41	
3910-42-20	32	1.1/4"	1.1/4"	M42x2	52	58	41	50	
3910-48-24	38	1.1/2"	1.1/2"	M48x2	59	67	48	60	

3915 Регулируемый адаптер 90° удлиненный, метрика DIN 3852-1/BSP

Long Adjustable Elbow BSP/Metric DIN 3852-1

Резьба / Thread:
Metric Parallel

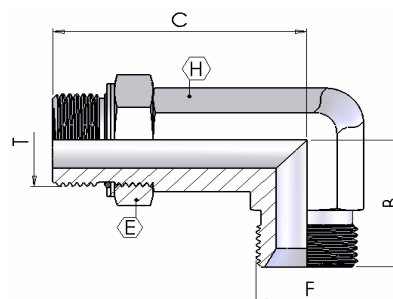


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
3915-10-02	6	1/4"	1/8"	M10x1	23	46	12	14	
3915-12-02	6	1/4"	1/8"	M12x1,5	27	54	14	17	
3915-14-04	8	5/16"	1/4"	M14x1,5	27	57	14	19	
3915-16-04	8	5/16"	1/4"	M16x1,5	29	67	19	22	
3915-16-06	10	3/8"	3/8"	M16x1,5	32	67	19	22	
3915-18-06	10	3/8"	3/8"	M18x1,5	32	67	19	24	
3915-18-08	12	1/2"	1/2"	M18x1,5	37	75	22	24	
3915-22-08	12	1/2"	1/2"	M22x1,5	37	78	22	27	
3915-22-12	20	3/4"	3/4"	M22x1,5	42	88	27	27	
3915-27-12	20	3/4"	3/4"	M27x2	42	95	27	36	
3915-27-16	25	1"	1"	M27x2	46	105	33	36	
3915-33-16	25	1"	1"	M33x2	46	105	33	41	
3915-42-20	32	1.1/4"	1.1/4"	M42x2	52	124	41	50	
3915-48-24	38	1.1/2"	1.1/2"	M48x2	59	141	48	60	

3410 Регулируемый адаптер 45° метрика DIN 3852-1/BSP

Adjustable 45° Elbow BSP/Metric DIN 3852-1

Резьба / Thread:
Metric Parallel

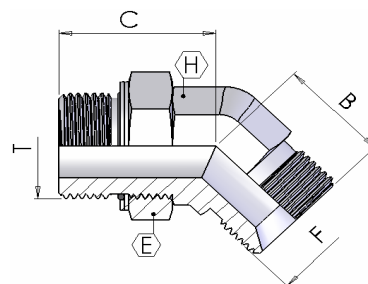


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
3410-10-02	6	1/4"	1/8"	M10x1	19	27	12	14	
3410-12-02	6	1/4"	1/8"	M12x1,5	21	29	14	17	
3410-14-04	8	5/16"	1/4"	M14x1,5	21	29	14	19	
3410-16-04	8	5/16"	1/4"	M16x1,5	22	33	19	22	
3410-16-06	10	3/8"	3/8"	M16x1,5	25	33	19	22	
3410-18-06	10	3/8"	3/8"	M18x1,5	25	33	19	24	
3410-18-08	12	1/2"	1/2"	M18x1,5	28	35	22	24	
3410-22-08	12	1/2"	1/2"	M22x1,5	28	38	22	27	
3410-22-12	20	3/4"	3/4"	M22x1,5	33	40	27	27	
3410-27-12	20	3/4"	3/4"	M27x2	33	44	27	36	
3410-27-16	25	1"	1"	M27x2	37	46	33	36	
3410-33-16	25	1"	1"	M33x2	37	47	33	41	
3410-42-20	32	1.1/4"	1.1/4"	M42x2	41	49	41	50	
3410-48-24	38	1.1/2"	1.1/2"	M48x2	45	53	48	60	

3610 Регулируемый тройник метрика DIN 3852-1/BSP

Adjustable Run Tee BSP/Metric DIN 3852-1

Резьба / Thread:
Metric Parallel

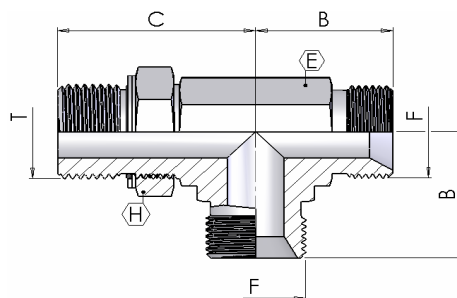

part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
3610-10-02	6	1/4"	1/8-28	M10x1	23	27	14	12	
3610-12-02	6	1/4"	1/8-28	M12x1,5	27	32	17	14	
3610-14-04	8	5/16"	1/4-19	M14x1,5	27	32	19	14	
3610-16-04	8	5/16"	1/4-19	M16x1,5	29	38	22	19	
3610-16-06	10	3/8"	3/8-19	M16x1,5	32	38	22	19	
3610-18-06	10	3/8"	3/8-19	M18x1,5	32	40	24	19	
3610-18-08	12	1/2"	1/2-14	M18x1,5	37	41	24	22	
3610-22-08	12	1/2"	1/2-14	M22x1,5	37	43	27	22	
3610-22-12	20	3/4"	3/4-11	M22x1,5	42	45	27	27	
3610-27-12	20	3/4"	3/4-11	M27x2	42	52	36	27	
3610-27-16	25	1"	1-11	M27x2	46	52	36	33	
3610-33-16	25	1"	1-11	M33x2	46	53	41	33	
3610-42-20	32	1.1/4"	1.1/4-11	M42x2	52	58	50	41	
3610-48-24	38	1.1/2"	1.1/2-11	M48x2	59	67	60	48	


3615

Регулируемый тройник, нижнее подключение метрика DIN 3852-1/BSP

Adjustable Branch Tee BSP/Metric DIN 3852-1

Резьба / Thread:

Metric Parallel

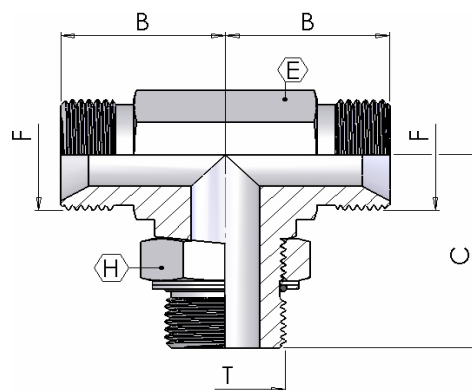


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
3615-10-02	6	1/4"	1/8-28	M10x1	23	27	14	12	
3615-12-02	6	1/4"	1/8-28	M12x1,5	27	32	17	14	
3615-14-04	8	5/16"	1/4-19	M14x1,5	27	32	19	14	
3615-16-04	8	5/16"	1/4-19	M16x1,5	29	38	22	19	
3615-16-06	10	3/8"	3/8-19	M16x1,5	32	38	22	19	
3615-18-06	10	3/8"	3/8-19	M18x1,5	32	40	24	19	
3615-18-08	12	1/2"	1/2-14	M18x1,5	37	41	24	22	
3615-22-08	12	1/2"	1/2-14	M22x1,5	37	43	27	22	
3615-22-12	20	3/4"	3/4-11	M22x1,5	42	45	27	27	
3615-27-12	20	3/4"	3/4-11	M27x2	42	52	36	27	
3615-27-16	25	1"	1-11	M27x2	46	52	36	33	
3615-33-16	25	1"	1-11	M33x2	46	53	41	33	
3615-42-20	32	1.1/4"	1.1/4-11	M42x2	52	58	50	41	
3615-48-24	38	1.1/2"	1.1/2-11	M48x2	59	67	60	48	

3520 Коннектор наружные резьбы В:

Male Connector BSP/UNF

Резьба / Thread:

UNF/UN (ISO 11926-1)

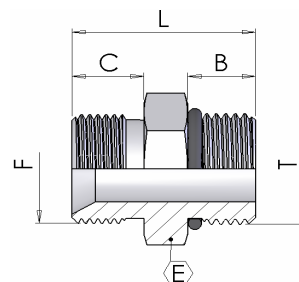


part number	Ø tube		Dimensions						
	mm	inch	F	T	L	B	C	E	
3520-04-02	6	1/4"	1/8-28	7/16-20	25	9	8	14	
3520-05-02	6	1/4"	1/8-28	1/2-20	25	9	8	16	
3520-06-04	8	5/16"	1/4-19	9/16-18	30	10	11	17	
3520-08-04	8	5/16"	1/4-19	3/4-16	32	11	11	22	
3520-08-06	10	3/8"	3/8-19	3/4-16	33	11	12	22	
3520-08-08	12	1/2"	1/2-14	3/4-16	36	11	14	22	
3520-10-06	10	3/8"	3/8-19	7/8-14	36	12,5	12	27	
3520-10-08	12	1/2"	1/2-14	7/8-14	38	13	14	27	
3520-10-12	20	3/4"	3/4-11	7/8-14	42	12,5	16	27	
3520-12-08	12	1/2"	1/2-14	1.1/16-12	42	15	14	32	
3520-12-12	20	3/4"	3/4-11	1.1/16-12	44	15	16	32	
3520-16-12	20	3/4"	3/4-11	1.5/16-12	45	15	16	38	
3520-16-16	25	1"	1-11	1.5/16-12	48	15	19	38	
3520-20-20	32	1.1/4"	1.1/4-11	1.5/8-12	51	15	20	50	
3520-24-24	38	1.1/2"	1.1/2-11	1.7/8-12	55	15	22	55	

3525 Коннектор наружные резьбы, удлин

Long Male Connector BSP/UNF

Резьба / Thread:

UNF/UN (ISO 11926-1)

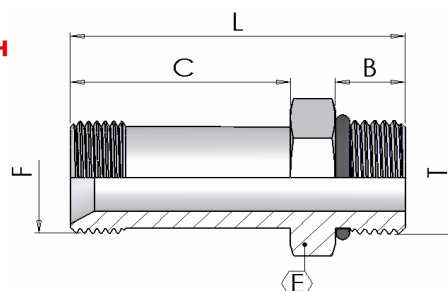


part number	Ø tube		Dimensions						
	mm	inch	F	T	L	B	C	E	
3525-04-02	6	1/4"	1/8-28	7/16-20	46	9	29	14	
3525-05-02	6	1/4"	1/8-28	1/2-20	46	9	29	16	
3525-06-04	8	5/16"	1/4-19	9/16-18	55	10	36	17	
3525-08-04	8	5/16"	1/4-19	3/4-16	57	11	36	22	
3525-08-06	10	3/8"	3/8-19	3/4-16	64	11	43	22	
3525-08-08	12	1/2"	1/2-14	3/4-16	70	11	48	22	
3525-10-06	10	3/8"	3/8-19	7/8-14	67	12,5	43	27	
3525-10-08	12	1/2"	1/2-14	7/8-14	71	13	48	27	
3525-10-12	20	3/4"	3/4-11	7/8-14	83	12,5	57	27	
3525-12-08	12	1/2"	1/2-14	1.1/16-12	76	15	48	32	
3525-12-12	20	3/4"	3/4-11	1.1/16-12	85	15	57	32	
3525-16-12	20	3/4"	3/4-11	1.5/16-12	86	15	57	38	
3525-16-16	25	1"	1-11	1.5/16-12	97	15	68	38	
3525-20-20	32	1.1/4"	1.1/4-11	1.5/8-12	114	15	84	50	
3525-24-24	38	1.1/2"	1.1/2-11	1.7/8-12	125	15	93	55	

3570 Адаптер гайка BSP/UNF наружная резьба

Swivel Nut Female BSP/UNF

Резьба / Thread:

UNF/UN (ISO 11926-1)

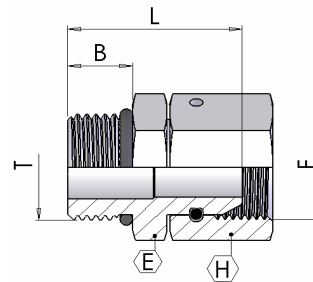


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	L	E	H	
3570-04-02	6	1/4"	1/8-28	7/16-20	9	28	14	14	
3570-05-02	6	1/4"	1/8-28	1/2-20	9	28	16	14	
3570-06-04	8	5/16"	1/4-19	9/16-18	10	29	17	19	
3570-08-04	8	5/16"	1/4-19	3/4-16	11	31	22	19	
3570-08-06	10	3/8"	3/8-19	3/4-16	11	32	22	22	
3570-08-08	12	1/2"	1/2-14	3/4-16	11	37	22	27	
3570-10-06	10	3/8"	3/8-19	7/8-14	13	36	27	22	
3570-10-08	12	1/2"	1/2-14	7/8-14	13	38	27	27	
3570-10-12	20	3/4"	3/4-11	7/8-14	13	41	27	32	
3570-12-08	12	1/2"	1/2-14	1.1/16-12	15	43	32	27	
3570-12-12	20	3/4"	3/4-11	1.1/16-12	15	43	32	32	
3570-16-12	20	3/4"	3/4-11	1.5/16-12	15	45	38	32	
3570-16-16	25	1"	1-11	1.5/16-12	15	51	38	41	
3570-20-20	32	1.1/4"	1.1/4-11	1.5/8-12	15	53	50	50	
3570-24-24	38	1.1/2"	1.1/2-11	1.7/8-12	15	57	55	60	

3920 Коннектор 90° BSP/UNF

Adjustable Elbow BSP/UNF

Резьба / Thread:

UNF/UN (ISO 11926-1)

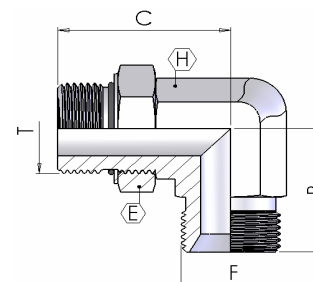


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
3920-04-02	6	1/4"	1/8"	7/16-20	23	46	12	14	
3920-05-02	6	1/4"	1/8"	1/2-20	24	50	14	16	
3920-06-04	8	5/16"	1/4"	9/16-18	27	57	14	19	
3920-08-04	8	5/16"	1/4"	3/4-16	29	67	19	22	
3920-08-06	10	3/8"	3/8"	3/4-16	32	67	19	22	
3920-08-08	12	1/2"	1/2"	3/4-16	37	75	22	22	
3920-10-06	10	3/8"	3/8"	7/8-14	34	78	22	27	
3920-10-08	12	1/2"	1/2"	7/8-14	37	78	22	27	
3920-10-12	20	3/4"	3/4"	7/8-14	42	88	27	27	
3920-12-08	12	1/2"	1/2"	1.1/16-12	40	92	27	32	
3920-12-12	20	3/4"	3/4"	1.1/16-12	42	92	27	32	
3920-16-12	20	3/4"	3/4"	1.5/16-12	45	105	33	41	
3920-16-16	25	1"	1"	1.5/16-12	46	105	33	41	
3920-20-20	32	1.1/4"	1.1/4"	1.5/8-12	52	124	41	50	
3920-24-24	38	1.1/2"	1.1/2"	1.7/8-12	59	135	48	55	

3925 Регулируемый адаптер 90° удлиненный BSP/UNF

Adjustable Elbow BSP/UNF

Резьба / Thread:

UNF/UN (ISO 11926-1)

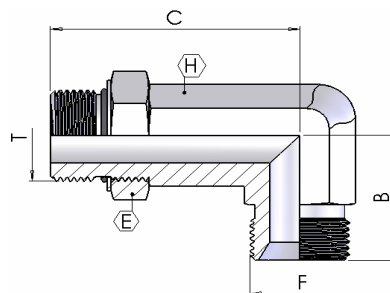


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
3925-04-02	6	1/4"	1/8"	7/16-20	23	26	12	14	
3925-05-02	6	1/4"	1/8"	1/2-20	24	29	14	16	
3925-06-04	8	5/16"	1/4"	9/16-18	27	32	14	19	
3925-08-04	8	5/16"	1/4"	3/4-16	29	37	19	22	
3925-08-06	10	3/8"	3/8"	3/4-16	32	37	19	22	
3925-08-08	12	1/2"	1/2"	3/4-16	37	40	22	22	
3925-10-06	10	3/8"	3/8"	7/8-14	34	43	22	27	
3925-10-08	12	1/2"	1/2"	7/8-14	37	43	22	27	
3925-10-12	20	3/4"	3/4"	7/8-14	42	46	27	27	
3925-12-08	12	1/2"	1/2"	1.1/16-12	40	50	27	32	
3925-12-12	20	3/4"	3/4"	1.1/16-12	42	50	27	32	
3925-16-12	20	3/4"	3/4"	1.5/16-12	45	52	33	41	
3925-16-16	25	1"	1"	1.5/16-12	46	52	33	41	
3925-20-20	32	1.1/4"	1.1/4"	1.5/8-12	52	57	41	50	
3925-24-24	38	1.1/2"	1.1/2"	1.7/8-12	59	61	48	55	

3420 Регулируемый адаптер 45° BSP/UNF

Adjustable Elbow BSP/UNF

Резьба / Thread:

UNF/UN (ISO 11926-1)

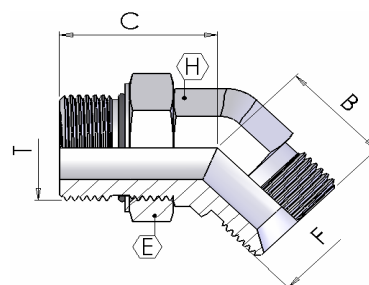


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
3420-04-02	6	1/4"	1/8"	7/16-20	12	27	12	14	
3420-05-02	6	1/4"	1/8"	1/2-20	14	27	14	16	
3420-06-04	8	5/16"	1/4"	9/16-18	14	29	14	19	
3420-08-04	8	5/16"	1/4"	3/4-16	19	33	19	22	
3420-08-06	10	3/8"	3/8"	3/4-16	19	33	19	22	
3420-08-08	12	1/2"	1/2"	3/4-16	22	35	22	22	
3420-10-06	10	3/8"	3/8"	7/8-14	22	39	22	27	
3420-10-08	12	1/2"	1/2"	7/8-14	22	39	22	27	
3420-10-12	20	3/4"	3/4"	7/8-14	27	40	27	27	
3420-12-08	12	1/2"	1/2"	1.1/16-12	27	44	27	32	
3420-12-12	20	3/4"	3/4"	1.1/16-12	27	44	27	32	
3420-16-12	20	3/4"	3/4"	1.5/16-12	33	47	33	41	
3420-16-16	25	1"	1"	1.5/16-12	33	47	33	41	
3420-20-20	32	1.1/4"	1.1/4"	1.5/8-12	41	49	41	50	
3420-24-24	38	1.1/2"	1.1/2"	1.7/8-12	48	49	48	55	

3620 Регулируемый тройник, нижнее подключение UNF/BSP

Adjustable Run Tee BSP/UNF

Резьба / Thread:

UNF/UN (ISO 11926-1)

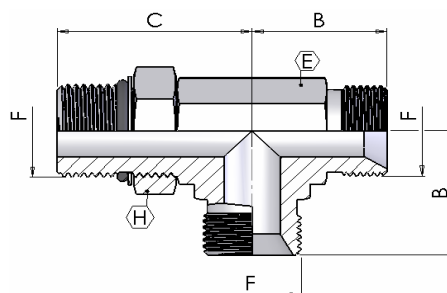


part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
3620-04-02	6	1/4"	1/8-28	7/16-20	23	26	14	12	
3620-05-02	6	1/4"	1/8-28	1/2-20	24	29	16	14	
3620-06-04	8	5/16"	1/4-19	9/16-18	27	32	19	14	
3620-08-04	8	5/16"	1/4-19	3/4-16	29	37	22	19	
3620-08-06	10	3/8"	3/8-19	3/4-16	32	37	22	19	
3620-08-08	12	1/2"	1/2-14	3/4-16	37	40	22	22	
3620-10-06	10	3/8"	3/8-19	7/8-14	34	43	27	22	
3620-10-08	12	1/2"	1/2-14	7/8-14	37	43	27	22	
3620-10-12	20	3/4"	3/4-11	7/8-14	42	46	27	27	
3620-12-08	12	1/2"	1/2-14	1.1/16-12	40	50	32	27	
3620-12-12	20	3/4"	3/4-11	1.1/16-12	42	50	32	27	
3620-16-12	20	3/4"	3/4-11	1.5/16-12	45	52	41	33	
3620-16-16	25	1"	1-11	1.5/16-12	46	52	41	33	
3620-20-20	32	1.1/4"	1.1/4-11	1.5/8-12	52	57	50	41	
3620-24-24	38	1.1/2"	1.1/2-11	1.7/8-12	59	61	55	48	

3625 Регулируемый тройник, боковое подключение UNF/BSP

Adjustable Branch Tee BSP/UNF

Резьба / Thread:

UNF/UN (ISO 11926-1)

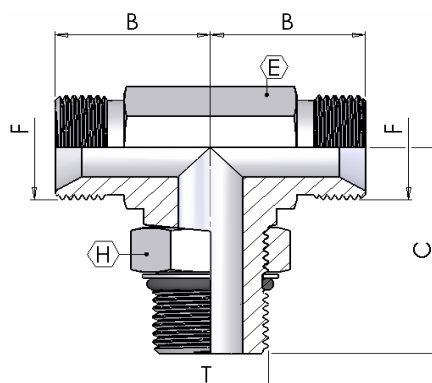

part number	Ø tube		Dimensions						
	mm	inch	F	T	B	C	H	E	
3625-04-02	6	1/4"	1/8-28	7/16-20	23	26	14	12	
3625-05-02	6	1/4"	1/8-28	1/2-20	24	29	16	14	
3625-06-04	8	5/16"	1/4-19	9/16-18	27	32	19	14	
3625-08-04	8	5/16"	1/4-19	3/4-16	29	37	22	19	
3625-08-06	10	3/8"	3/8-19	3/4-16	32	37	22	19	
3625-08-08	12	1/2"	1/2-14	3/4-16	37	40	22	22	
3625-10-06	10	3/8"	3/8-19	7/8-14	34	43	27	22	
3625-10-08	12	1/2"	1/2-14	7/8-14	37	43	27	22	
3625-10-12	20	3/4"	3/4-11	7/8-14	42	46	27	27	
3625-12-08	12	1/2"	1/2-14	1.1/16-12	40	50	32	27	
3625-12-12	20	3/4"	3/4-11	1.1/16-12	42	50	32	27	
3625-16-12	20	3/4"	3/4-11	1.5/16-12	45	52	41	33	
3625-16-16	25	1"	1-11	1.5/16-12	46	52	41	33	
3625-20-20	32	1.1/4"	1.1/4-11	1.5/8-12	52	57	50	41	
3625-24-24	38	1.1/2"	1.1/2-11	1.7/8-12	59	61	55	48	

